

## SIMATIC NET

### Industrial Ethernet switches SCALANCE XC-200

#### Operating Instructions

Introduction	1
Safety notices	2
Recommendations on network security	3
Description of the device	4
Mounting	5
Connecting up	6
Maintenance	7
Troubleshooting	8
Technical specifications	9
Dimension drawings	10
Certifications and approvals	11

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

#### **DANGER**

indicates that death or severe personal injury **will** result if proper precautions are not taken.

#### **WARNING**

indicates that death or severe personal injury **may** result if proper precautions are not taken.

#### **CAUTION**

indicates that minor personal injury can result if proper precautions are not taken.

#### **NOTICE**

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

#### **WARNING**

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Table of contents

<b>1</b>	<b>Introduction .....</b>	<b>7</b>
<b>2</b>	<b>Safety notices .....</b>	<b>13</b>
<b>3</b>	<b>Recommendations on network security .....</b>	<b>15</b>
<b>4</b>	<b>Description of the device .....</b>	<b>21</b>
4.1	Product overview .....	21
4.2	Device views .....	25
4.2.1	SCALANCE XC206-2 (ST/BFOC) .....	25
4.2.2	SCALANCE XC206-2 (SC) .....	26
4.2.3	SCALANCE XC206-2SFP .....	27
4.2.4	SCALANCE XC208 .....	28
4.2.5	SCALANCE XC216 .....	29
4.2.6	SCALANCE XC216-4C .....	30
4.2.7	SCALANCE XC224 .....	31
4.2.8	SCALANCE XC224-4C .....	32
4.3	Accessories .....	32
4.4	SELECT / SET button .....	35
4.5	LED display .....	37
4.5.1	Overview .....	37
4.5.2	"RM" LED .....	38
4.5.3	"SB" LED .....	38
4.5.4	"F" LED .....	38
4.5.5	LEDs "DM1" and "DM2" .....	38
4.5.6	LEDs "L1" and "L2" .....	39
4.5.7	Port LEDs .....	40
4.6	C-PLUG .....	41
4.6.1	Function of the C-PLUG .....	41
4.6.2	Replacing the C-PLUG .....	43
4.7	Functions .....	44
4.7.1	Combo ports .....	44
<b>5</b>	<b>Mounting .....</b>	<b>47</b>
5.1	Safety notices for installation .....	47
5.2	General notes for SFP transceivers .....	50
5.3	Types of installation .....	50
5.4	Installation on a DIN rail .....	51
5.4.1	Top-hat rail mounting with fastening plate .....	51
5.4.2	Top-hat rail mounting without fastening plate .....	53
5.5	Installation on a standard S7-300 rail .....	54
5.5.1	Installation on a standard rail S7-300 with fastening plate .....	54

5.5.2	Installation on a standard rail S7-300 without fastening plate.....	55
5.6	Installation on a standard rail S7-1500.....	56
5.6.1	Installation on a standard rail S7-1500 with fastening plate.....	56
5.6.2	Installation on a standard rail S7-1500 without fastening plate.....	57
5.7	Wall mounting with fastening plate.....	58
5.8	Changing the position of the securing bar.....	59
<b>6</b>	<b>Connecting up .....</b>	<b>61</b>
6.1	Wiring rules .....	65
6.2	Power supply.....	65
6.3	Signaling contact.....	67
6.4	Functional ground .....	68
6.5	Industrial Ethernet .....	69
6.5.1	Electrical.....	69
6.5.2	Optical .....	71
6.6	Serial interface .....	72
<b>7</b>	<b>Maintenance .....</b>	<b>75</b>
<b>8</b>	<b>Troubleshooting.....</b>	<b>77</b>
8.1	Downloading new firmware using TFTP without WBM and CLI.....	77
8.2	Restoring the factory settings.....	78
<b>9</b>	<b>Technical specifications.....</b>	<b>79</b>
9.1	Technical specifications SCALANCE XC206-2 (ST/BFOC).....	79
9.2	Technical specifications SCALANCE XC206-2 (SC) .....	81
9.3	Technical specifications SCALANCE XC206-2SFP.....	84
9.4	Technical specifications of SCALANCE XC206-2SFP G .....	86
9.5	Technical specifications of SCALANCE XC206-2SFP EEC .....	88
9.6	Technical specifications of SCALANCE XC206-2SFP G EEC .....	91
9.7	Technical specifications of the SCALANCE XC208.....	94
9.8	Technical specifications of SCALANCE XC208G .....	96
9.9	Technical specifications of SCALANCE XC208EEC .....	98
9.10	Technical specifications of SCALANCE XC208G EEC.....	100
9.11	Technical specifications of the SCALANCE XC216.....	102
9.12	Technical specifications of SCALANCE XC216EEC .....	104
9.13	Technical specifications of SCALANCE XC216-4C .....	105
9.14	Technical specifications of SCALANCE XC216-4C G .....	107
9.15	Technical specifications of SCALANCE XC216-4C G EEC.....	109
9.16	Technical specifications of the SCALANCE XC224.....	112

9.17	Technical specifications of SCALANCE XC224-4C G .....	113
9.18	Technical specifications of SCALANCE XC224-4C G EEC .....	115
9.19	Mechanical stability (in operation) .....	117
9.20	RF radiation according to NAMUR NE21 .....	118
9.21	Cable lengths .....	118
9.22	Switching properties .....	119
<b>10</b>	<b>Dimension drawings .....</b>	<b>121</b>
10.1	Dimension drawings SCALANCE XC-200 .....	121
<b>11</b>	<b>Certifications and approvals .....</b>	<b>127</b>
	<b>Index.....</b>	<b>135</b>



# Introduction

## Purpose of the Operating Instructions

These operating instructions support you when installing and connecting up devices of the SCALANCE XC-200 product group.

The configuration and the integration of the devices in a network are not described in these operating instructions.

## Validity of the Operating Instructions

These operating instructions apply to the following devices:

- SCALANCE XC206-2 (ST/BFOC)
- SCALANCE XC206-2 (SC)
- SCALANCE XC206-2SFP
- SCALANCE XC206-2SFP G
- SCALANCE XC206-2SFP EEC
- SCALANCE XC206-2SFP G EEC
- SCALANCE XC208
- SCALANCE XC208G
- SCALANCE XC208EEC
- SCALANCE XC208G EEC
- SCALANCE XC216
- SCALANCE XC216EEC
- SCALANCE XC216-4C
- SCALANCE XC216-4C G
- SCALANCE XC216-4C G EEC
- SCALANCE XC224
- SCALANCE XC224-4C G
- SCALANCE XC224-4C G EEC

Unless mentioned otherwise, the descriptions in these operating instructions refer to all devices of the SCALANCE XC-200 product group named above in the section on validity.

## Designations used

Table 1-1 Explanation of designations used

Classification	Description	Terms used
Product line	The product line includes all devices and variants of all product groups. If information applies to all product groups within the product line, the term SCALANCE X-200 is used.	SCALANCE X-200
Product group	If information applies to all devices and variants of a product group, the term SCALANCE XC-200 is used.	SCALANCE XC-200
Device	If information relates to a specific device, the device name is used.	e.g. SCALANCE XC206-2SFP
Device group	If information applies to a specific group of devices, a corresponding abbreviation is used.	
	If information applies to all gigabit variants of SCALANCE XC-200, the following terms are used. You can recognize the gigabit variants by the suffix "G" in the type designation. Devices that only support gigabit via SFPs are not considered gigabit variants (e.g. SCALANCE XC206-2SFP).	SCALANCE XC-200G, gigabit variants
	If information applies to all SCALANCE XC-200 with coated circuit boards, the following terms are used. You can recognize the EEC variants by the suffix "EEC" in the type designation.	SCALANCE XC-200EEC, EEC variants

## Additional documentation

In addition, note the Operating Instructions of the pluggable transceivers.

You will find the supplementary documentation here:

- On the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15247>)

## Documentation on configuration

You will find detailed information on configuring the devices in the following configuration manuals:

- SCALANCE XB-200/XC-200/XF-200BA/XP-200/XR-300WG Web Based Management
- SCALANCE XB-200/XC-200/XF-200BA/XP-200/XR-300WG Command Line Interface

You will find the configuration manuals here:

- on the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/24185/man>).

## Further documentation

In the system manuals "Industrial Ethernet / PROFINET Industrial Ethernet" and "Industrial Ethernet / PROFINET passive network components", you will find information on other SIMATIC NET products that you can operate along with the devices of this product line in an Industrial Ethernet network.

There, you will find among other things optical performance data of the communications partner that you require for the installation.

You will find the system manuals here:

- On the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support:
  - Industrial Ethernet / PROFINET Industrial Ethernet System Manual (<https://support.industry.siemens.com/cs/ww/en/view/27069465>)
  - Industrial Ethernet / PROFINET Passive Network Components System Manual (<https://support.industry.siemens.com/cs/ww/en/view/84922825>)

## SIMATIC NET manuals

You will find the SIMATIC NET manuals here:

- On the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15247>).

## SIMATIC NET glossary

Explanations of many of the specialist terms used in this documentation can be found in the SIMATIC NET glossary.

You will find the SIMATIC NET glossary here:

- SIMATIC NET Manual Collection or product DVD  
The DVD ships with certain SIMATIC NET products.
- On the Internet under the following address:  
50305045 (<https://support.industry.siemens.com/cs/ww/en/view/50305045>)

## Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

<http://www.siemens.com/industrialsecurity> (<https://www.siemens.com/industrialsecurity>)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

<http://www.siemens.com/industrialsecurity> (<https://www.siemens.com/industrialsecurity>)

## Catalogs

You will find the article numbers for the Siemens products of relevance here in the following catalogs:


- SIMATIC NET Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC Products for Totally Integrated Automation and Micro Automation, catalog ST 70
- Industry Mall - catalog and ordering system for automation and drive technology, Online catalog (<https://mall.industry.siemens.com/goos/WelcomePage.aspx?regionUrl=/de&language=en>)

You can request the catalogs and additional information from your Siemens representative.

## Device defective

If a fault develops, please send the device to your SIEMENS service center for repair. Repairs on-site are not possible.

## Recycling and disposal

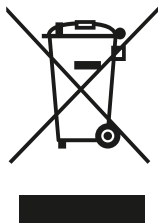

The products are low in pollutants, can be recycled and meet the requirements of the WEEE directive 2012/19/EU for the disposal of electrical and electronic equipment.

Do not dispose of the products at public disposal sites.

For environmentally friendly recycling and the disposal of your old device contact a certified disposal company for electronic scrap or your Siemens contact (Product return (<https://support.industry.siemens.com/cs/ww/en/view/109479891>)).

Note the different national regulations.

## Trademarks

The following and possibly other names not identified by the registered trademark sign ® are registered trademarks of Siemens AG:

SIMATIC NET, SCALANCE, C-PLUG, OLM

## Electrostatic discharge



### NOTICE

#### Electrostatic sensitive devices (ESD)

Electronic modules contain electrostatic sensitive components

These components can easily be destroyed if handled incorrectly.

Note the following instructions to avoid damage.

- Touch electronic modules only when you absolutely need to work on them.
- If electronic modules need to be touched, the body of the person involved must first be electrostatically discharged and grounded.
- Do not bring electronic modules in contact with electrically isolating materials such as plastic film, isolating table top pads or clothing made of synthetic fibers.
- Place the modules only on conductive surfaces.
- Pack, store and transport electronic modules and components only in conductive packaging such as metalized plastic or metal containers, conductive foam or household aluminum foil.



# Safety notices

## Read the safety notices

Note the following safety notices. These relate to the entire working life of the device.

You should also read the safety notices relating to handling in the individual sections, particularly in the sections "Installation" and "Connecting up".

 <b>CAUTION</b>
--

To prevent injury, read the manual before use.
--

## Safety notices on use in hazardous areas

### General safety notices relating to protection against explosion

 <b>WARNING</b>
---

<b>EXPLOSION HAZARD</b>
-------------------------

Do not open the device when the supply voltage is turned on.
--

### Safety notices when using the device according to Hazardous Locations (HazLoc) and FM.

If you use the device under HazLoc or FM conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.



## Recommendations on network security

### NOTICE

#### Information security

Connect to the device and change the standard password for the user set in the factory "admin" and "" before you operate the device.

To prevent unauthorized access, note the following security recommendations.

### General

- You should make regular checks to make sure that the device meets these recommendations and/or other security guidelines.
- Evaluate your plant as a whole in terms of security. Use a cell protection concept with suitable products (<https://www.industry.siemens.com/topics/global/en/industrial-security/pages/default.aspx>).
- When the internal and external network are disconnected, an attacker cannot access internal data from the outside. Therefore operate the device only within a protected network area.
- For communication via non-secure networks use additional devices with VPN functionality to encrypt and authenticate the communication.
- Terminate management connections correctly (WBM, Telnet, SSH etc.).

### Physical access

- Restrict physical access to the device to qualified personnel because the plug-in data medium can contain sensitive data.
- Lock unused physical interfaces on the device. Unused interfaces can be used to gain access to the plant without permission.

### Software (security functions)

- Keep the firmware up to date. Check regularly for security updates for the device. You can find information on this at the Industrial Security (<https://www.siemens.com/industrialsecurity>) website.
- Inform yourself regularly about security recommendations published by Siemens ProductCERT (<https://www.siemens.com/cert/en/cert-security-advisories.htm>).
- Only activate protocols that you require to use the device.
- Restrict access to the management of the device with rules in an access control list (ACL).

- The option of VLAN structuring provides protection against DoS attacks and unauthorized access. Check whether this is practical or useful in your environment.
- Use a central logging server to log changes and accesses. Operate your logging server within the protected network area and check the logging information regularly.

## **Passwords**

- Define rules for the assignment of passwords.
- Regularly change your passwords to increase security.
- Use passwords with a high password strength.
- Make sure that all passwords are protected and inaccessible to unauthorized persons.
- Do not use the same password for different users and systems.

## **Certificates and keys**

- On the device there is a preset SSL certificate with key. Replace this certificate with a self-made certificate with key. We recommend that you use a certificate signed either by a reliable external or by an internal certification authority.
- Use a certification authority including key revocation and management to sign certificates.
- Make sure that user-defined private keys are protected and inaccessible to unauthorized persons.
- It is recommended that you use password-protected certificates in the PKCS #12 format
- Verify certificates and fingerprints on the server and client to prevent "man in the middle" attacks.
- It is recommended that you use certificates with a key length of at least 2048 bits.
- Change certificates and keys immediately, if there is a suspicion of compromise.

## Secure/non-secure protocols and services

- Avoid or disable non-secure protocols and services, for example HTTP, Telnet and TFTP. For historical reasons, these protocols are available, however not intended for secure applications. Use non-secure protocols on the device with caution.
- Check whether use of the following protocols and services is necessary:
  - Non authenticated and unencrypted ports
  - MRP, HRP
  - IGMP snooping
  - LLDP
  - Syslog
  - RADIUS
  - DHCP Options 66/67
  - TFTP
  - GMRP and GVRP
- The following protocols provide secure alternatives:
  - HTTP → HTTPS
  - Telnet → SSH
  - SNMPv1/v2c → SNMPv3  
 Check whether use of SNMPv1/v2c. is necessary. SNMPv1/v2c is classified as non-secure. Use the option of preventing write access. The device provides you with suitable setting options.  
 If SNMP is enabled, change the community names. If no unrestricted access is necessary, restrict access with SNMP.  
 Use the authentication and encryption mechanisms of SNMPv3.
- Use secure protocols when access to the device is not prevented by physical protection measures.
- If you require non-secure protocols and services, operate the device only within a protected network area.
- Restrict the services and protocols available to the outside to a minimum.
- For the DCP function, enable the "Read Only" mode after commissioning.
- If you use RADIUS for management access to the device, activate secure protocols and services.

## Interfaces security

- Disable unused interfaces.
- Use IEEE 802.1X for interface authentication.
- Use the function "Locked Ports" to block interfaces for unknown nodes.

- Use the configuration options of the interfaces, e.g. the "Edge Type".
- Configure the receive ports so that they discard all untagged frames ("Tagged Frames Only").

## Available protocols

The following list provides you with an overview of the open protocol ports.

The table includes the following columns:

- **Protocol**
- **Port**
- **Default port status**
  - Open  
The factory setting of the port is "Open".
  - Closed  
The factory setting of the port is "Closed".
- **Configurable port**
  - ✓  
The port status can be changed.
  - --  
The port status cannot be changed.
- **Authentication**  
Specifies whether the communication partner is authenticated.
- **Encryption**  
Specifies whether or not the transfer is encrypted.

## List of available protocols (local access via a local network)

The following is a list of all available protocols and their ports through which the device can be accessed.

Protocol	Protocol/ Port number	Default port status	Configurable port	Authentication	Encryption
TELNET	TCP/23	Open		Yes	No
SSH	TCP/22	Open	--	Yes	Yes
HTTP	TCP/80	Open	--	Yes	No
HTTPS	TCP/443	Open	✓	Yes	Yes
SNMP	UDP/161	Open	✓	Yes	Yes (when configured)
PROFINET	UDP/34964 UDP/49154 - 49157 <sup>1)</sup>	Open		No	No

Protocol	Protocol/ Port number	Default port status	Configurable port	Authentication	Encryption
EtherNet/IP	TCP/44818 UDP/2222 UDP/44818	Closed (Open with EtherNet/IP variants)	✓	No	No
DHCP	UDP/67 UDP/68	Closed	✓	No	No

<sup>1)</sup> Port number can be configured via the WBM.



## Description of the device

### 4.1 Product overview

#### Article numbers

There are two variants of some devices with different article numbers. The two variants differ only in their factory settings. All other properties are identical.

Device	Description	Article number (Ethernet/IP)	Article number (PROFINET)
SCALANCE XC206-2 (ST/BFOC)	6 x 10/100 Mbps RJ-45 ports, 2 x 100 Mbps ST/BFOC ports, multimode FO cable	-	6GK5 206-2BB00-2AC2
SCALANCE XC206-2 (SC)	6 x 10/100 Mbps RJ-45 ports, 2 x 100 Mbps SC ports, mul- timode FO cable	-	6GK5 206-2BD00-2AC2
SCALANCE XC206-2SFP	6 x 10/100 Mbps RJ-45 ports, 2 x pluggable transceiver slots with 100/1000 Mbps	-	6GK5 206-2BS00-2AC2
SCALANCE XC206-2SFP G	6 x 10/100/1000 Mbps RJ45 ports, 2 x pluggable transceiv- er slots with 1000 Mbps	6GK5 206-2GS00-2TC2	6GK5 206-2GS00-2AC2
SCALANCE XC206-2SFP EEC	6 x 10/100 Mbps RJ45 ports, 2 x pluggable transceiver slots with 100/1000 Mbps, coated PCB	-	6GK5 206-2BS00-2FC2
SCALANCE XC206-2SFP G EEC	6 x 10/100/1000 Mbps RJ45 ports, 2 x pluggable transceiv- er slots with 1000 Mbps, coat- ed PCB	-	6GK5 206-2GS00-2FC2
SCALANCE XC208	8 x 10/100 Mbps RJ-45 ports	-	6GK5 208-0BA00-2AC2
SCALANCE XC208G	8 x 10/100/1000 Mbps RJ45 ports	6GK5 208-0GA00-2TC2	6GK5 208-0GA00-2AC2
SCALANCE XC208EEC	8 x 10/100 Mbps RJ45 ports, coated PCB	-	6GK5 208-0BA00-2FC2
SCALANCE XC208G EEC	8 x 10/100/1000 Mbps RJ45 ports, coated PCB	-	6GK5 208-0GA00-2FC2
SCALANCE XC216	16 x 10/100 Mbps RJ-45 ports	-	6GK5 216-0BA00-2AC2
SCALANCE XC216EEC	16 x 10/100 Mbps RJ45 ports, coated PCB	-	6GK5 216-0BA00-2FC2
SCALANCE XC216-4C	16 x 10/100 Mbps RJ45- Ports, 4 x plug-in transceiver slots with 100/1000 Mbps, 4 x combo ports	-	6GK5 216-4BS00-2AC2

## 4.1 Product overview

Device	Description	Article number (Ethernet/IP)	Article number (PROFINET)
SCALANCE XC216-4C G	16 x 10/100/1000 Mbps RJ45-Ports, 4 x plug-in transceiver slots with 1000 Mbps, 4 x combo ports	6GK5 216-4GS00-2TC2	6GK5 216-4GS00-2AC2
SCALANCE XC216-4C G EEC	16 x 10/100/1000 Mbps RJ45-Ports, 4 x plug-in transceiver slots with 1000 Mbps, 4 x combo ports, coated PCB	-	6GK5 216-4GS00-2FC2
SCALANCE XC224	24 x 10/100 Mbps RJ-45 ports	-	6GK5 224-0BA00-2AC2
SCALANCE XC224-4C G	24 x 10/100/1000 Mbps RJ45-Ports, 4 x plug-in transceiver slots with 1000 Mbps, 4 x combo ports	6GK5 224-4GS00-2TC2	6GK5 224-4GS00-2AC2
SCALANCE XC224-4C G EEC	24 x 10/100/1000 Mbps RJ45-Ports, 4 x plug-in transceiver slots with 1000 Mbps, 4 x combo ports, coated PCB	-	6GK5 224-4GS00-2FC2

## Factory settings

**EtherNet/IP variants**

- Industrial Ethernet protocol: Ethernet/IP
- Base Bridge mode: 802.1Q VLAN Bridge
- Redundancy mechanism: RSTP
- Trust mode: Trust CoS-DSCP
- IGMP Snooping/IGMP Querier: On
- IPv4 Address Collision Detection: Attempt to defend

**PROFINET variants**

- Industrial Ethernet protocol: PROFINET
- Base Bridge mode: 802.1D transparent bridge


- Redundancy mechanism: Ring redundancy

Device	Factory setting ring ports
<ul style="list-style-type: none"> <li>• SCALANCE XC206-2 (ST/BFOC)</li> <li>• SCALANCE XC206-2 (SC)</li> </ul>	P0.7 and P0.8
<ul style="list-style-type: none"> <li>• SCALANCE XC216</li> <li>• SCALANCE XC216EEC</li> <li>• SCALANCE XC216-4C</li> <li>• SCALANCE XC216-4C G</li> <li>• SCALANCE XC216-4C G EEC</li> <li>• SCALANCE XC224</li> <li>• SCALANCE XC224-4C G</li> <li>• SCALANCE XC224-4C G EEC</li> </ul>	<ul style="list-style-type: none"> <li>• SCALANCE XC206-2SFP</li> <li>• SCALANCE XC206-2SFP G</li> <li>• SCALANCE XC206-2SFP EEC</li> <li>• SCALANCE XC206-2SFP G EEC</li> <li>• SCALANCE XC208</li> <li>• SCALANCE XC208G</li> <li>• SCALANCE XC208EEC</li> <li>• SCALANCE XC208G EEC</li> </ul>

- Trust mode: Trust CoS
- IGMP Snooping/IGMP Querier: Off
- IPv4 Address Collision Detection: Never give up

## Type designation

The type designation of a SCALANCE XC-200 is made up of several parts that have the following meaning:

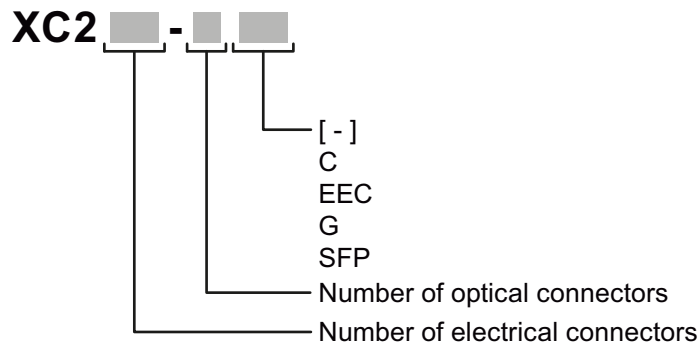

Interfaces of devices with optical connectors:

Interface	Property
C	Combo port
EEC	Enhanced Environment Conditions (coated PCB)
G	Gigabit
SFP	Pluggable transceiver port with 100/1000 Mbps

## Unpacking and checking



### WARNING

#### Do not use any parts that show evidence of damage

If you use damaged parts, there is no guarantee that the device will function according to the specification.

If you use damaged parts, this can lead to the following problems:

- Injury to persons
- Loss of the approvals
- Violation of the EMC regulations
- Damage to the device and other components

Use only undamaged parts.

1. Make sure that the package is complete.
2. Check all the parts for transport damage.

## Components of the product

The following components are supplied with a SCALANCE XC-200:

- One IE switch
- A 4-pin terminal block for the power supply
- A 2-pin terminal block for the signaling contact
- One product DVD with documentation and software

The following components are also included in the product package of a SCALANCE XC-200 with plug-in transceiver slots (SFPs):

- One cover for each plug-in transceiver slot

The following components are also supplied with a SCALANCE XC206-2:

- 2 covers for optical ports

## Spare parts


The following spare parts are available for SCALANCE XC-200:

Component	Description	Article number
Spring-loaded terminal block, 4 terminals	4-terminal spring-loaded terminal block to connect the power supply (24 VDC), for SCALANCE X/W/S/M, pack of 5	6GK5 980-1DB10-0AA5
Spring-loaded terminal block, 2 terminals	2-terminal spring-loaded terminal block to connect the signaling contact (24 VDC), for SCALANCE X/W/S/M, pack of 5	6GK5 980-0BB10-0AA5

## 4.2 Device views


### 4.2.1 SCALANCE XC206-2 (ST/BFOC)

The following figure shows an overview of the components of the SCALANCE XC206-2 (ST/BFOC).

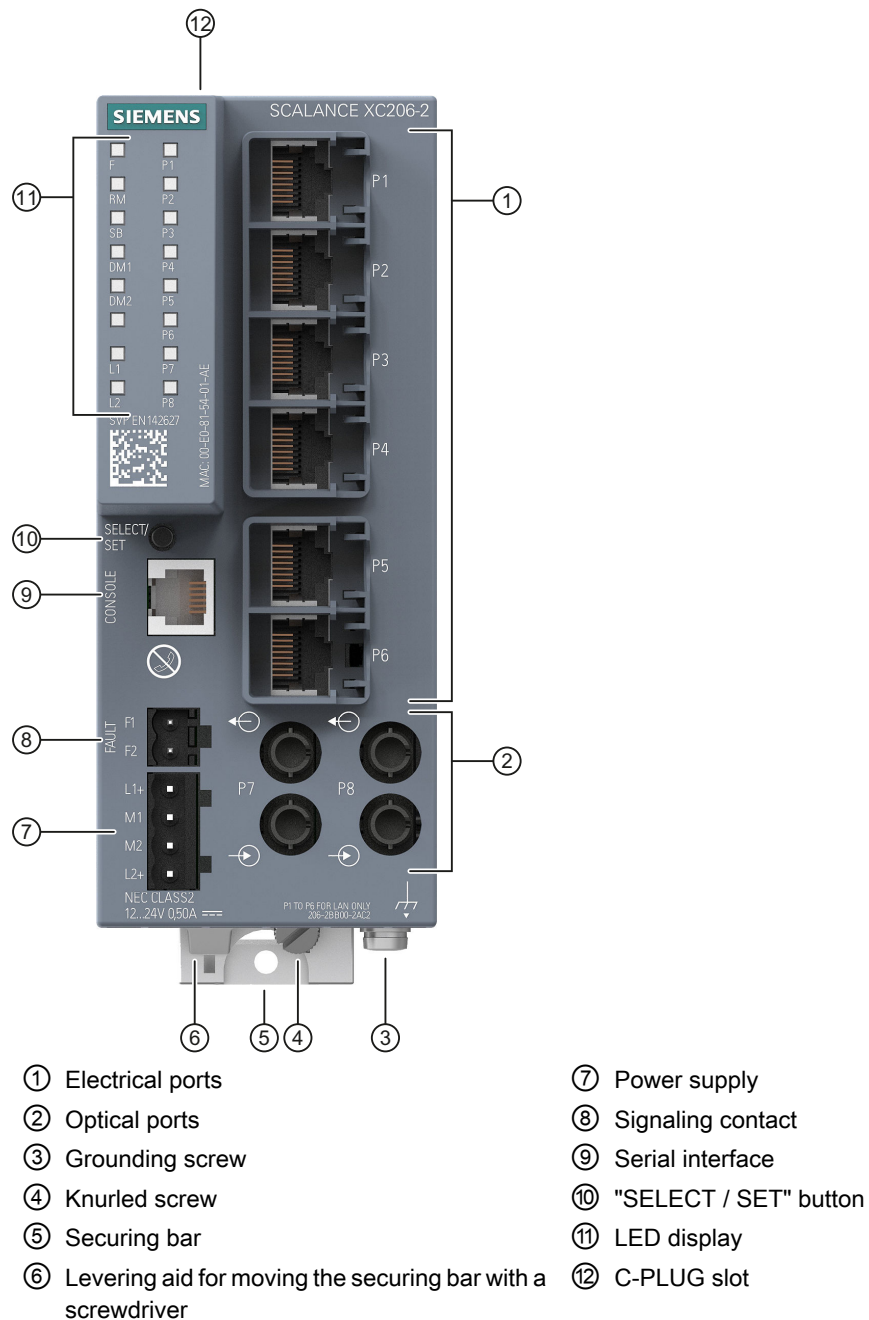

## 4.2.2 SCALANCE XC206-2 (SC)


The following figure shows an overview of the components of the SCALANCE XC206-2 (SC).

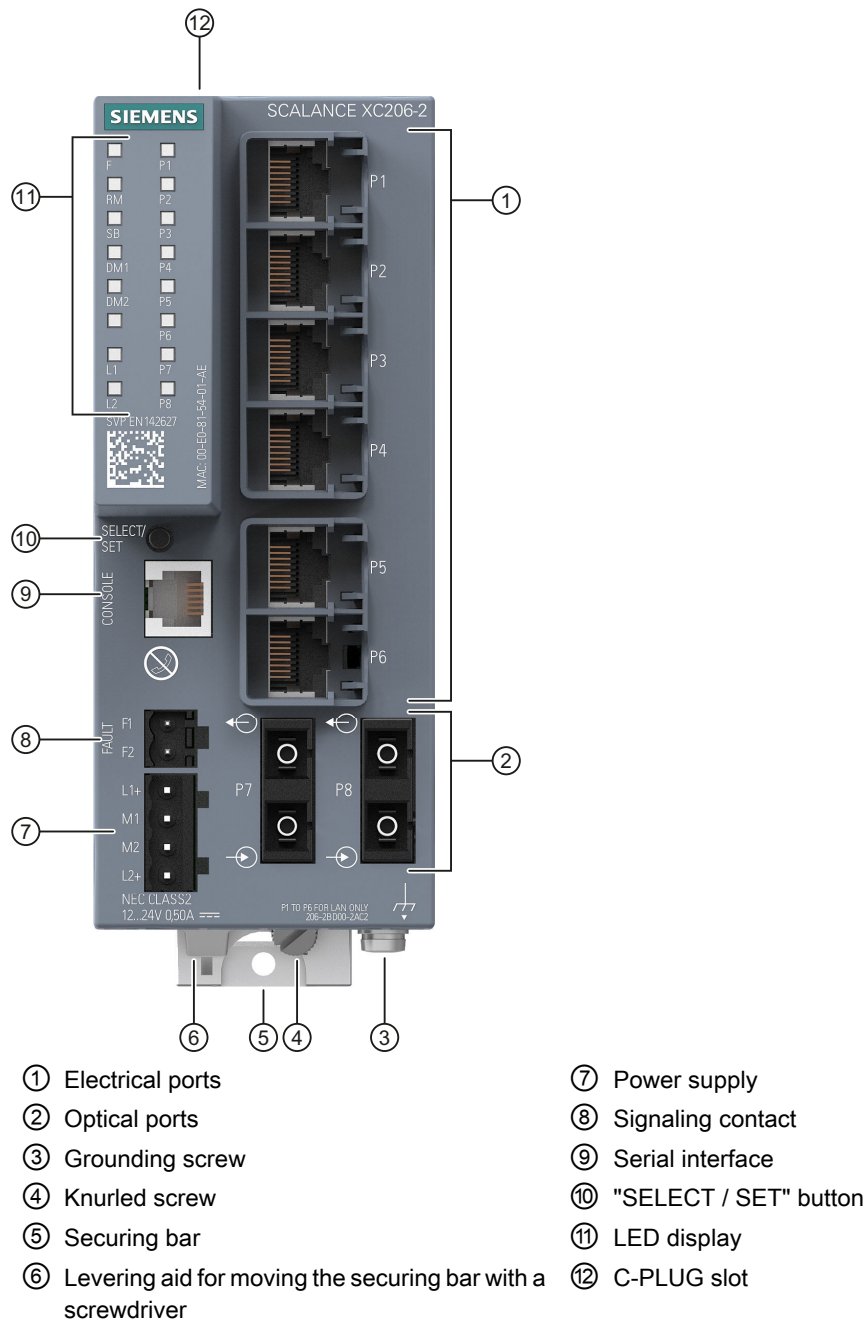

### 4.2.3 SCALANCE XC206-2SFP

The following figure provides an overview of the components of SCALANCE XC206-2SFP and the following devices:


- SCALANCE XC206-2SFP G
- SCALANCE XC206-2SFP EEC
- SCALANCE XC206-2SFP G EEC

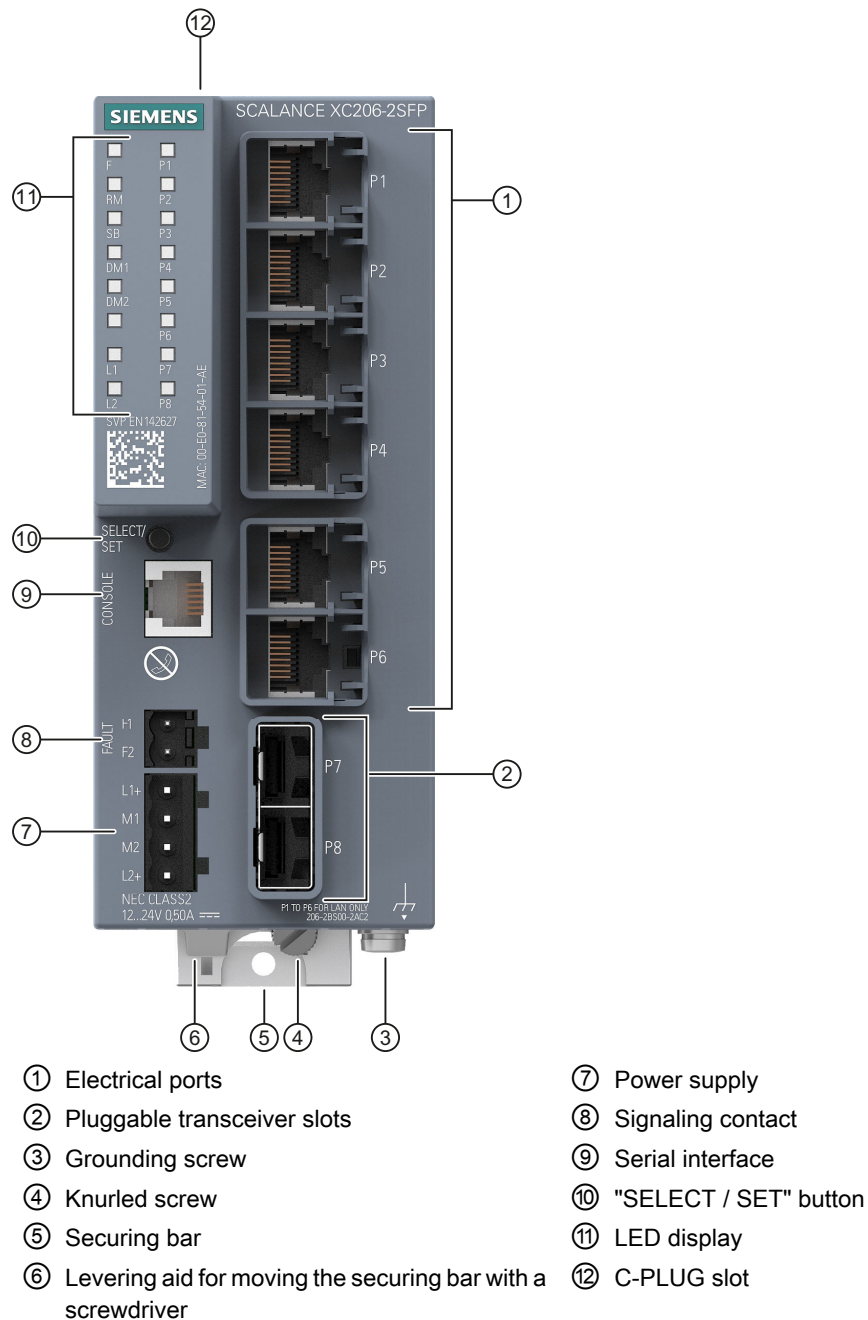

## 4.2.4 SCALANCE XC208


The following figure provides an overview of the components of SCALANCE XC208 and the following devices:

- SCALANCE XC208G
- SCALANCE XC208EEC
- SCALANCE XC208G EEC

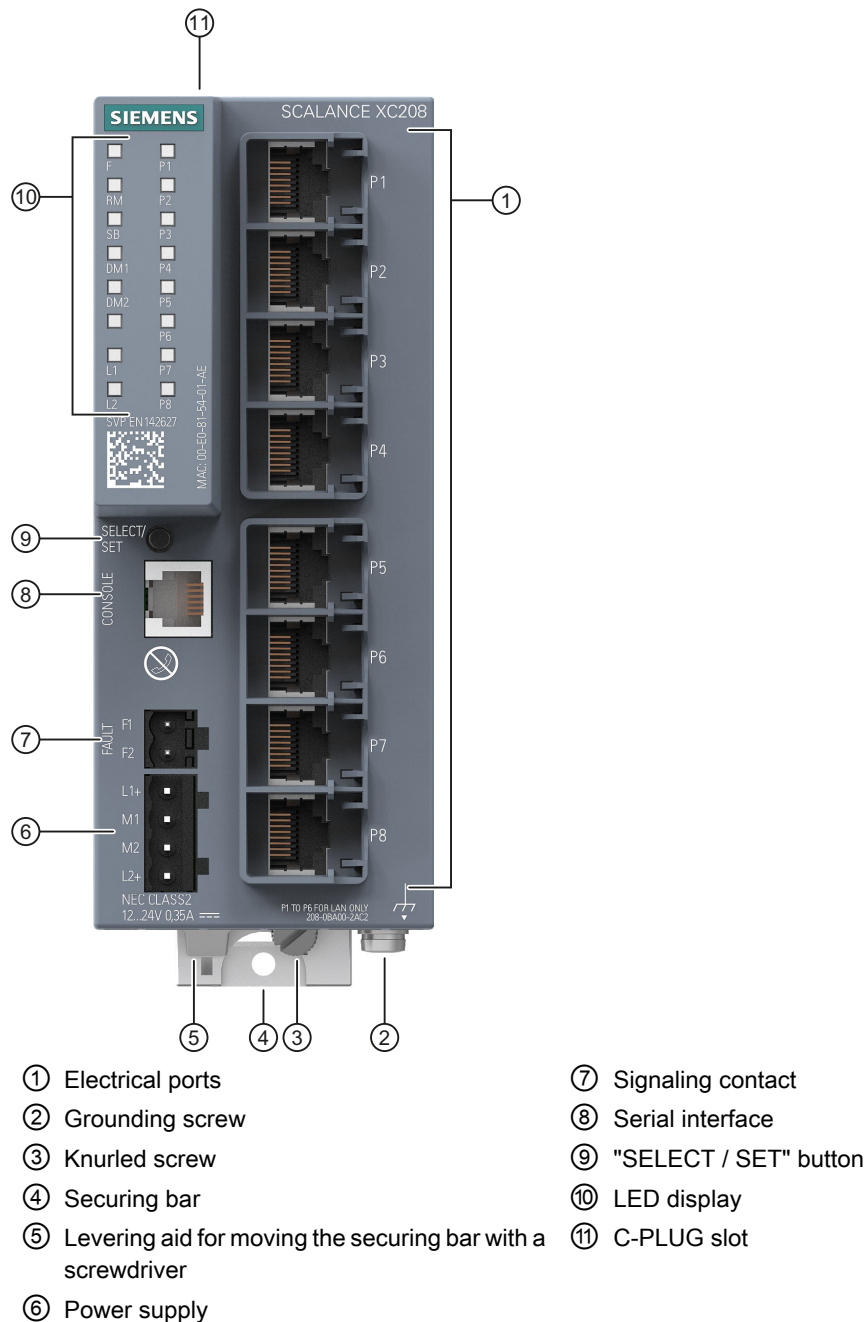

## 4.2.5 SCALANCE XC216

The following figure provides an overview of the components of SCALANCE XC216 and SCALANCE XC216EEC.

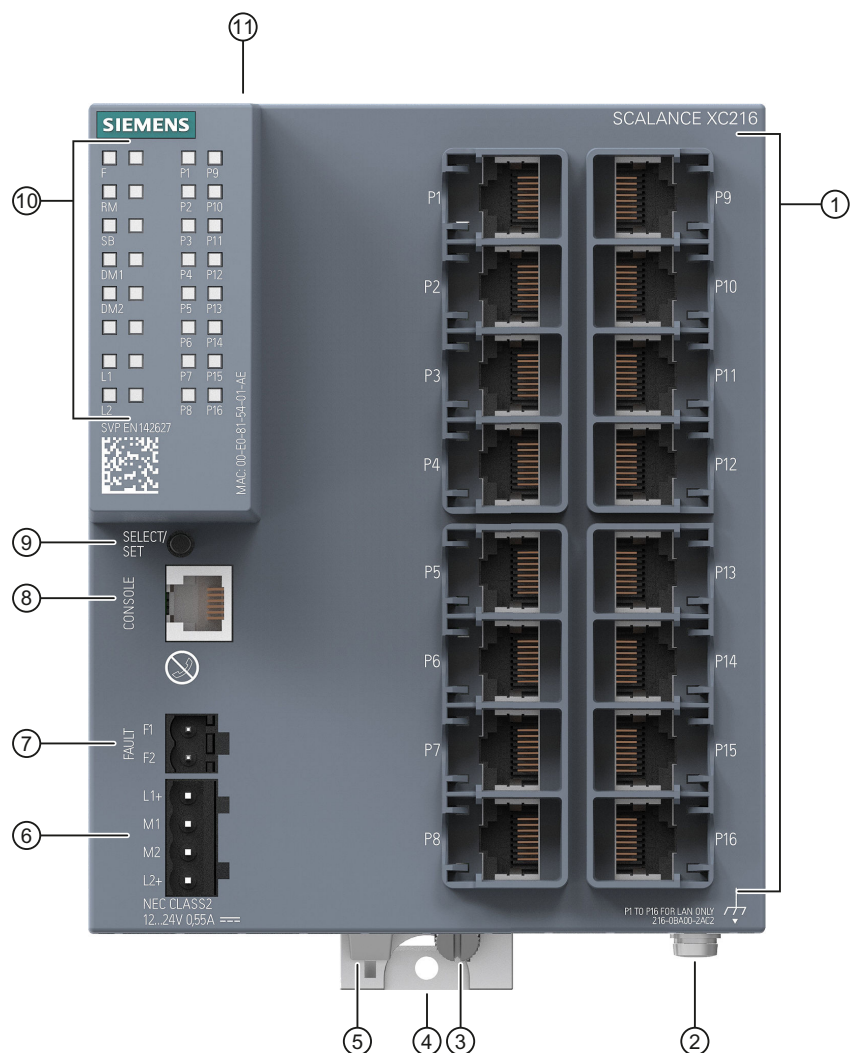


- |   |                         |
|---|-------------------------|
| ① Electrical ports  | ⑦ Signaling contact     |
| ② Grounding screw   | ⑧ Serial interface      |
| ③ Knurled screw   | ⑨ "SELECT / SET" button |
| ④ Securing bar  | ⑩ LED display           |
| ⑤ Levering aid for moving the securing bar with a screwdriver | ⑪ C-PLUG slot           |
| ⑥ Power supply  |                         |

### 4.2.6 SCALANCE XC216-4C

The following figure provides an overview of the components of SCALANCE XC216-4C and the following devices:


- SCALANCE XC216-4C G
- SCALANCE XC216-4C G EEC

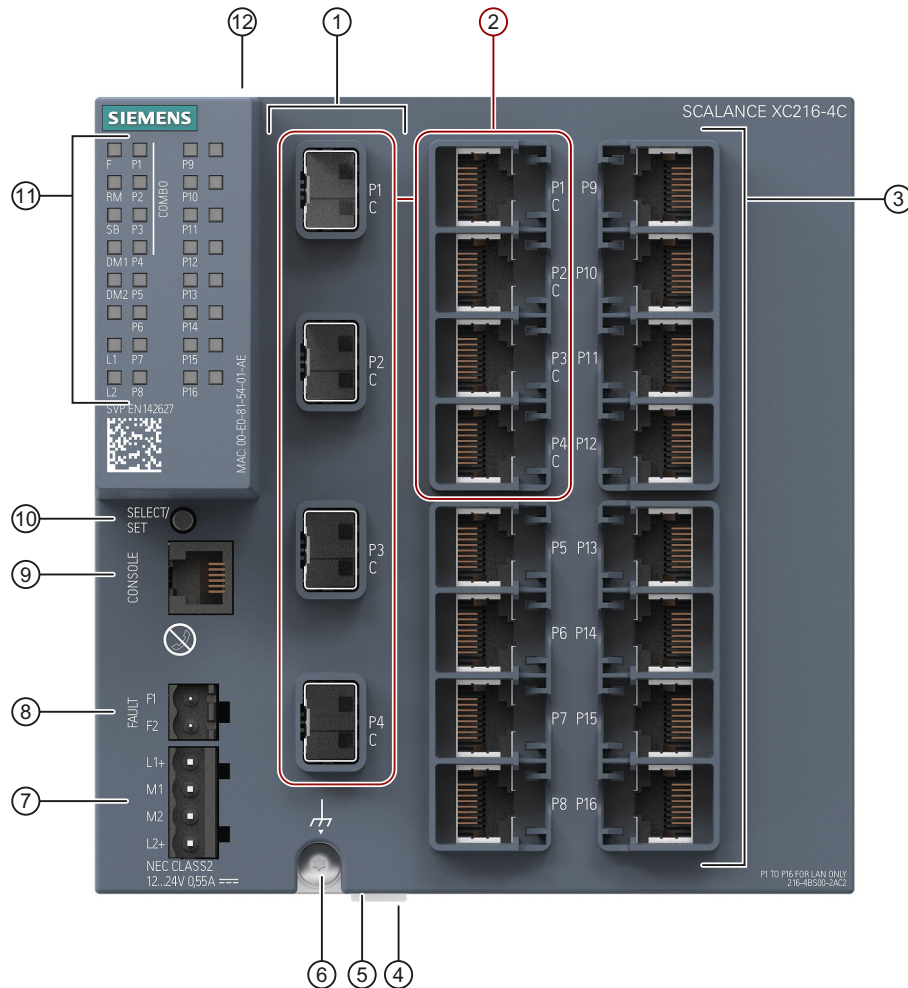

- |   |                         |
|---|-------------------------|
| ① Pluggable transceiver slots   | ⑦ Power supply          |
| ② Combo ports   | ⑧ Signaling contact     |
| ③ Electrical ports  | ⑨ Serial interface      |
| ④ Unlocking the top-hat rail latch  | ⑩ "SELECT / SET" button |
| ⑤ Location for mounting to an S7 standard rail<br>(on bottom of the device, not in picture) | ⑪ LED display           |
| ⑥ Grounding screw   | ⑫ C-PLUG slot           |

### 4.2.7 SCALANCE XC224


The following figure shows an overview of the components of the SCALANCE XC224.

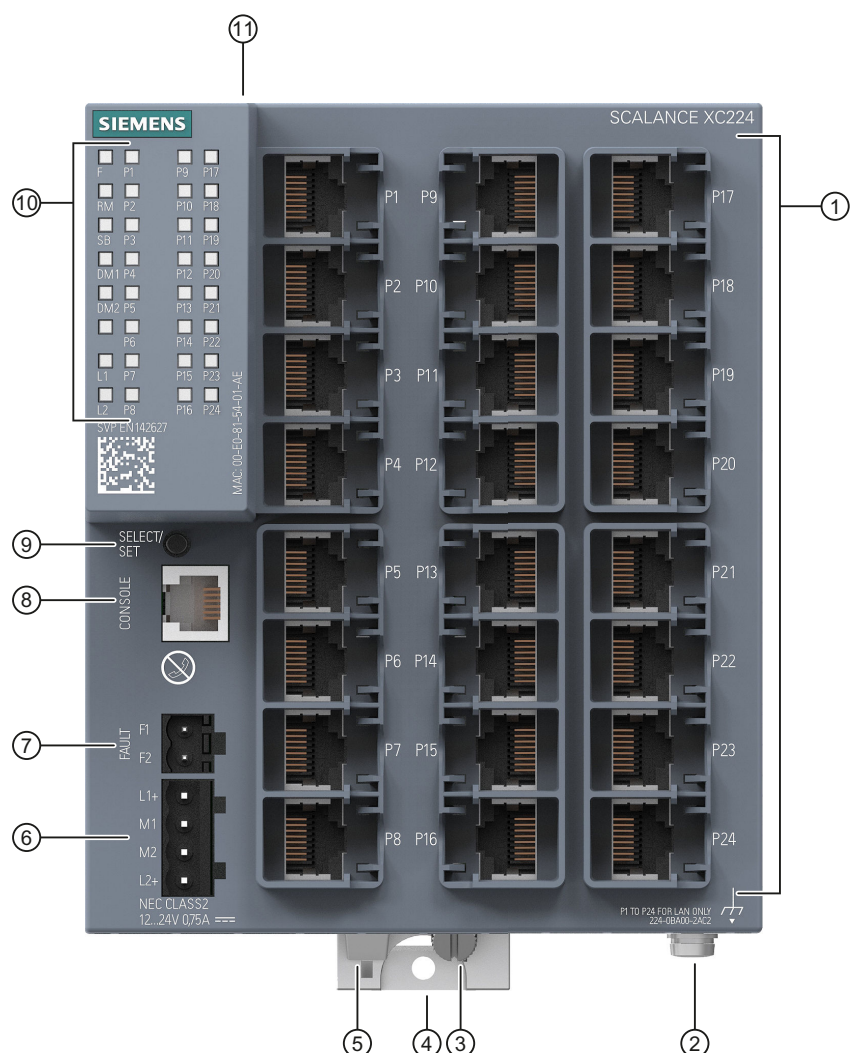

- |   |                         |
|---|-------------------------|
| ① Electrical ports  | ⑦ Signaling contact     |
| ② Grounding screw   | ⑧ Serial interface      |
| ③ Knurled screw   | ⑨ "SELECT / SET" button |
| ④ Securing bar  | ⑩ LED display           |
| ⑤ Levering aid for moving the securing bar with a screwdriver | ⑪ C-PLUG slot           |
| ⑥ Power supply  |                         |

### 4.2.8 SCALANCE XC224-4C

The following figure provides an overview of the components of SCALANCE XC224-4C G and SCALANCE XC224-4C G EEC

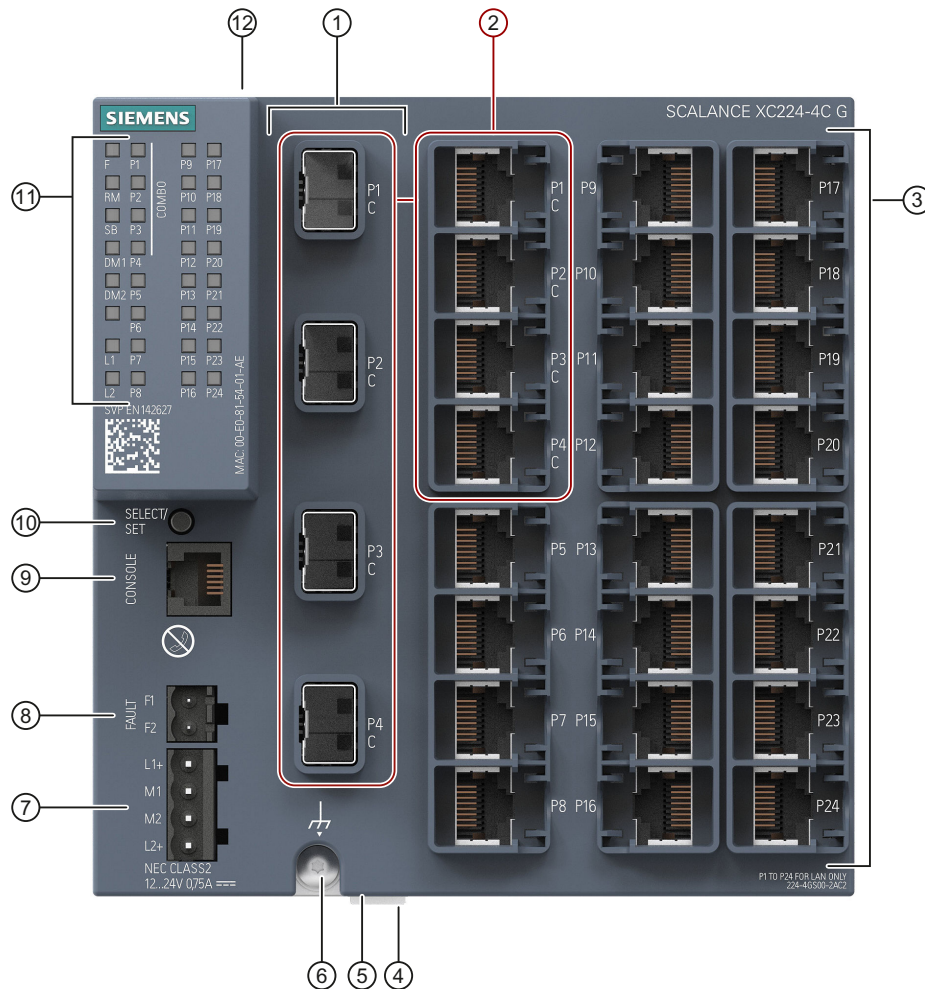

- |   |                         |
|---|-------------------------|
| ① Pluggable transceiver slots   | ⑦ Power supply          |
| ② Combo ports   | ⑧ Signaling contact     |
| ③ Electrical ports  | ⑨ Serial interface      |
| ④ Unlocking the top-hat rail latch  | ⑩ "SELECT / SET" button |
| ⑤ Location for mounting to an S7 standard rail<br>(on bottom of the device, not in picture) | ⑪ LED display           |
| ⑥ Grounding screw   | ⑫ C-PLUG slot           |

## 4.3 Accessories

The following accessories are available for SCALANCE XC-200:

## C-PLUG

Component	Description	Article number
C-PLUG	Configuration plug, exchangeable storage medium for saving configuration data, 32 MB	6GK1 900-0AB00
	Configuration plug, exchangeable storage medium for saving configuration data, 32 MB, coated (conformal coating)	6GK1 900-0AQ00
	Configuration plug, exchangeable storage medium for saving configuration data, 256 MB	6GK1 900-0AB10

## Cable

Component	Description	Article number
Connecting cable (RJ-11/ RS-232)	Preassembled, serial cable with RJ-11 and RS-232 plug, Length: 3 m pack of 1	6GK5 980-3BB00-0AA5

## Pluggable transceiver SFP (100 Mbps)

Type	Property	Article number
SFP991-1	1 x 100 Mbps, LC port optical for glass FO cable (multimode), up to max. 5 km	6GK5991-1AD00-8AA0
SFP991-1 (C)	1 x 100 Mbps, SC port optical, for glass FO cable (multimode), up to max. 5 km, varnished	6GK5991-1AD00-8FA0
SFP991-1LD	1 x 100 Mbps LC port optical for glass FO cable (single mode) up to max. 26 km	6GK5991-1AF00-8AA0
SFP991-1LD (C)	1 x 100 Mbps LC port optical for glass FO cable (single mode) up to max. 26 km, varnished	6GK5991-1AF00-8FA0
SFP991-1LH+	1 x 100 Mbps LC port optical for glass FO cable (single mode) up to max. 70 km	6GK5991-1AE00-8AA0
SFP991-1ELH200	1 x 100 Mbps LC port optical for glass FO cable (single mode) up to max. 200 km	6GK5991-1AE30-8AA0

The SFP plug-in transceiver (100 Mbps) cannot be operated in SFP+ slots.

Pluggable transceivers with the supplement (C) in the type name have varnished printed circuit boards (conformal coating).

### Note

You cannot use the plug-in transceiver SFP (100 Mbps) with the following devices:

- Devices with the suffix "G" in the type designation
- Devices with combo ports

**Pluggable transceiver SFP (1000 Mbps)**

Type	Property	Article number
SFP992-1	1 x 1000 Mbps, LC port optical for glass FO cable (multimode), up to max. 750 m	6GK5 992-1AL00-8AA0
SFP992-1+	1 x 1000 Mbps, LC port optical for glass FO cable (multimode), up to max. 2 km	6GK5 992-1AG00-8AA0
SFP992-1LD	1 x 1000 Mbps LC port optical for glass FO cable (single mode) up to max. 10 km	6GK5 992-1AM00-8AA0
SFP992-1LD (C)	1 x 1000 Mbps LC port optical for glass FO cable (single mode) up to max. 10 km, varnished	6GK5 992-1AM00-8FA0
SFP992-1LD+	1 x 1000 Mbps LC port optical for glass FO cable (single mode) up to max. 30 km	6GK5 992-1AM30-8AA0
SFP992-1LH	1 x 1000 Mbps LC port optical for glass FO cable (single mode) up to max. 40 km	6GK5 992-1AN00-8AA0
SFP992-1LH+	1 x 1000 Mbps LC port optical for glass FO cable (single mode) up to max. 70 km	6GK5 992-1AP00-8AA0
SFP992-1ELH	1 x 1000 Mbps LC port optical for glass FO cable (single mode) up to max. 120 km	6GK5 992-1AQ00-8AA0

Pluggable transceivers with the supplement (C) in the type name have varnished printed circuit boards (conformal coating).

**Note****Restriction for pluggable transceivers**

The maximum ambient temperature changes if you use pluggable transceivers.

You can find the corresponding values for the ambient temperature in the section "Technical specifications (Page 79)".

**Bidirectional plug-in transceiver SFP**

Bidirectional plug-in transceivers feature only one fiber connection. They transmit and receive on two different wavelengths. To establish a connection, you need two matching bidirectional SFPs. The connected SFPs must respectively transmit on the wavelength at which the connection partner receives.

Type	Properties	Article number
SFP992-1BXMT	1 x 1000 Mbps LC port optical for glass FO (multimode) with max. 500 m, transmits at 1550 nm, receives at 1310 nm	6GK5 992-1AL00-8TA0
SFP992-1BXMR	1 x 1000 Mbps LC port optical for glass FO (multimode) with max. 500 m, transmits at 1310 nm, receives at 1550 nm	6GK5 992-1AL00-8RA0

Type	Properties	Article number
SFP992-1BX10T	1 x 1000 Mbps LC port optical for glass FO (single mode) with max. 10 km, transmits at 1550 nm, receives at 1310 nm	6GK5 992-1AM00-8TA0
SFP992-1BX10R	1 x 1000 Mbps LC port optical for glass FO (single mode) with max. 10 km, transmits at 1310 nm, receives at 1550 nm	6GK5 992-1AM00-8RA0

## 4.4 SELECT / SET button

### Position

The "SELECT/SET" button is located on the front of the device.

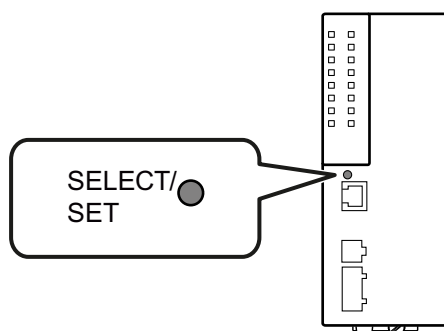


Figure 4-1 Position of the "SELECT/SET" button, for example on the SCALANCE XC-200 with 8 ports

### Setting the display mode

To set the required display mode, press the "SELECT/SET" button.

For more detailed information on the display modes, refer to the section "LEDs "DM1" and "DM2" (Page 38)".

### Resetting the device to factory defaults

#### NOTICE

##### Previous settings

If you reset, all the settings you have made will be overwritten by factory defaults.

#### NOTICE

##### Inadvertent reset

An inadvertent reset can cause disturbances and failures in the configured network.

#### Requirement

- The device is in operation.
- The function "Reset to Factory Defaults" is enabled for the "SELECT / SET" button.

---

#### Note

##### Reset despite disabled "SELECT/SET" button

If you have disabled the "Restore Factory Defaults" function for the "SELECT/SET" button in the configuration, this does not apply during the startup phase, see section "Restoring the factory settings (Page 78)".

If the function has been disabled in the configuration, it is only disabled on completion of the startup phase.

---

#### Procedure

To reset the device to the factory defaults during operation, follow the steps below:

1. Switch to display mode A.  
Display mode A is active if the LEDs "DM1" and "DM2" are unlit.  
If the "DM1" and "DM2" LEDs are lit or flashing, you will need to press the "SET/SELECT" repeatedly until the "DM1" and "DM2" LEDs go off.  
If you do not press the "SELECT/SET" button for longer than 1 minute, the device automatically changes to display mode A.
2. Hold down the "SELECT/SET" button for 12 seconds.  
After 9 seconds, the "DM1" and "DM2" LEDs start to flash for 3 seconds. At the same time, the port LEDs go on one after the other.  
After you have held down the button for 12 seconds, the device restarts and the factory defaults are restored.  
If you release the button before the 12 seconds have elapsed, the reset is canceled.

#### Enabling and disabling the functions of the button

In the configuration, you can enable or disable the functions of the button.

#### Defining the fault mask

Using the fault mask, you specify an individual "good status" for the connected ports and the power supply. Deviations from this status are displayed as errors/faults.

You configure newly plugged-in connections in the configuration.


To define the fault mask, follow the steps below:

1. Switch to display mode D.  
Display mode D is active if the "DM1" and "DM2" LEDs are lit green..  
If another display mode is active, you will need to press the "SET/SELECT" button repeatedly until the "DM1" and "DM2" LEDs are lit green.
2. Hold down the "SELECT/SET" button for 5 seconds.  
After 2 seconds, the "DM1" and "DM2" LEDs start to flash for 3 seconds. At the same time, the port LEDs go on one after the other.  
After you have held down the button for 5 seconds, the current settings are stored as the "good status".  
If you release the button before the 5 seconds have elapsed, the previous fault mask will be retained.

## 4.5 LED display

### 4.5.1 Overview

The following figure shows the arrangement of the LEDs based on the example of a SCALANCE XC-200 with 8 ports.

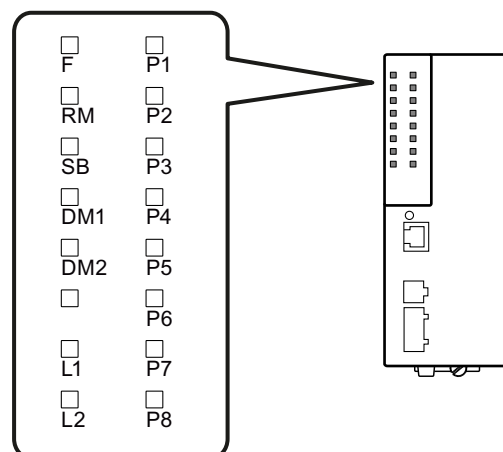

F	LED for displaying the fault/error status
RM	LED for displaying the "redundancy manager" function
SB	LED for displaying the "standby" function
DM1/DM2	LEDs for displaying the display mode
L1/L2	LEDs for displaying the power supply
P	LEDs for displaying the port status *)
COMBO	Indicates that the LEDs belong to combo ports

\*) The number of port LEDs depends on the device.

## 4.5 LED display

## 4.5.2 "RM" LED

The "RM" LED indicates whether or not the device is a redundancy manager and whether or not the ring is operating free of error.

LED color	LED status	Meaning
-	Off	The device is not a redundancy manager.
Green	On	The device is a redundancy manager. The ring is working without problems, monitoring is activated.
Green	Flashing	The device is a redundancy manager. An interruption has been detected on the ring and the device has switched through.

## 4.5.3 "SB" LED

The "SB" LED shows the status of the standby function.

LED color	LED status	Meaning
-	Off	The standby function is disabled.
Green	On	The standby function is enabled. The standby section is passive.
Green	Flashing	The standby function is enabled. The standby section is active.

## 4.5.4 "F" LED

The "F" LED shows the fault/error status of the device.

**Meaning during device startup**

LED color	LED status	Meaning during device startup
-	Off	Device startup was completed successfully.
Red	On	Device startup is not yet completed or errors have occurred.
Red	Flashing	There are errors in the firmware.

**Meaning during operation**

LED color	LED status	Meaning during operation
-	Off	The device is operating free of errors. The signaling contact is closed.
Red	On	The device has detected a problem. The signaling contact has opened.

## 4.5.5 LEDs "DM1" and "DM2"

The "DM1" and "DM2" LEDs indicate which display mode is set.

There are 4 display modes (A, B, C and D). Display mode A is the default mode.

Depending on the set display mode, the "L1", "L2" LEDs and the port LEDs show different information.

LED color	LED status		Meaning
	DM1 LED	DM2 LED	
-	Off		Display mode A
Green	On	Off	Display mode B
Green	Off	On	Display mode C
Green	On		Display mode D

### Setting the display mode

To set the required display mode, press the "SELECT/SET" button.

If you do not press the "SELECT/SET" button for longer than 1 minute, the device automatically changes to display mode A.

Pressing SELECT/SET button starting at display mode A	LED status		Display mode
	DM1	DM2	
-	Off		Display mode A
Press once	On	Off	Display mode B
Press twice	Off	On	Display mode C
Press three times	On		Display mode D

### 4.5.6 LEDs "L1" and "L2"

The "L1" and "L2" LEDs indicate the current range of the power supply at connectors L1 and L2.

The meaning of the "L1" and "L2" LEDs depends on the set display mode, see section "LEDs "DM1" and "DM2" (Page 38)".

#### Meaning in display modes A, B and C

In display modes A, B and C, from the "L1" and "L2" LEDs you can see whether the power supply is higher or lower than 9.6 V.

L1/L2 LED		L1/L2 connector
LED color	LED status	
-	Off	Power supply lower than 9.6 V
Green	On	Power supply higher than 9.6 V

## 4.5 LED display

**Meaning in display mode D**

In display mode D, the "L1" and "L2" LEDs indicate whether the power supply is monitored.

L1/L2 LED		L1/L2 connector
LED color	LED status	
-	Off	Power supply is not monitored. If the power supply falls below 9.6 V, the signaling contact does not respond.
Green	On	Power supply is monitored. If the power supply falls below 9.6 V, the signaling contact responds.

## 4.5.7

**Port LEDs**

The port LEDs "P1", "P2" etc. show information about the corresponding ports.

The meaning of the Port LEDs depends on the set display mode, see section "LEDs "DM1" and "DM2" (Page 38)".

**Meaning in display mode A**

In display mode A, the port LEDs indicate whether a valid link exists.

LED color	LED status	Meaning
-	Off	No valid link to the port (for example communications partner turned off or cable not connected).
Green	On	Link exists and port in normal status. In this status, the port can receive and send data.
	Flashes once per period*	Link exists and port in "blocking" status. In this status, the port only receives management data (no user data).
	Flashes three times per period*	Link exists and port turned off by management. In this status, no data is sent or received via the port.
	Flashes four times per period*	Link exists and is in the "monitor port" status. In this status, the data traffic of another port is mirrored to this port.
Yellow	Flashing / lit	Receiving data at port

\* 1 period  $\triangleq$  2.5 seconds

**Meaning in display mode B**

In display mode B, the port LEDs indicate the transmission speed.

LED color	LED status	Meaning
-	Off	Port operating at 10 Mbps
Green	On	Port operating at 100 Mbps
Orange	On	Port operating at 1000 Mbps

If there is a connection problem and the type of transmission is fixed (autonegotiation off), the desired status, in other words the set transmission speed (1000 Mbps, 100 Mbps, 10 Mbps) continues to be displayed. If there is a connection problem and autonegotiation is active, the port LED goes off.

**Meaning in display mode C**

In display mode C, the port LEDs indicate the mode.

LED color	LED status	Meaning
-	Off	Port operating in half duplex mode
Green	On	Port operating in full duplex mode

**Meaning in display mode D**

In display mode D, the port LEDs indicate whether the port is monitored.

LED color	LED status	Meaning
-	Off	Port is not monitored. If no link was established at the port the signaling contact does not indicate an error.
Green	On	Port is monitored. If no link was established at the port the signaling contact indicates an error.

## 4.6 C-PLUG

### 4.6.1 Function of the C-PLUG

**NOTICE**
**Do not remove or insert a C-PLUG during operation**

A C-PLUG may only be removed or inserted when the device is turned off.

### Saving the configuration data

A C-PLUG is an exchangeable storage medium for storing the configuration data of the device. This allows fast and uncomplicated replacement of a device. The C-PLUG is taken from the previous device and inserted in the new device. The first time it is started up, the replacement device has the same configuration as the previous device except for the device-specific MAC address set by the vendor.

A C-PLUG stores the current information about the configuration of a device.

**Note**

The device can also be operated without a C-PLUG.

## 4.6 C-PLUG

### How it works

#### Operating mode

In terms of the C-PLUG, there are three modes for the device:

- Without C-PLUG  
The device stores the configuration in internal memory.  
This mode is active if no C-PLUG is inserted.
- With unwritten C-PLUG  
If an unwritten C-PLUG (factory status or deleted with Clean function) is used, the local configuration already existing on the device is automatically stored on the inserted C-PLUG during startup.  
This mode is active as soon as an unwritten C-PLUG is inserted.
- With written C-PLUG  
A device with a written and accepted C-PLUG uses the configuration data of the C-PLUG automatically when it starts up. The requirement for acceptance is that the data was written by a compatible device type.  
If there is configuration data in the internal memory of the device this is overwritten.  
This mode is active as soon as a written C-PLUG is inserted.

#### Operation with C-PLUG

The configuration stored on the C-PLUG is displayed over the user interfaces.

If changes are made to the configuration, the device stores the configuration directly on the C-PLUG, if this is in the "ACCEPTED" status and in internal memory.

### Response to errors

Inserting a C-PLUG that does not contain the configuration of a compatible device type and inadvertently removing the C-PLUG, or general malfunctions of the C-PLUG are indicated by the diagnostic mechanisms of the device.

- Fault LED
- Web Based Management (WBM)
- SNMP
- Command Line Interface (CLI)
- PROFINET diagnostics

The user then has the choice of either removing the C-PLUG again or selecting the option to reformat the C-PLUG.

## 4.6.2 Replacing the C-PLUG


### Position of the C-PLUG

**NOTICE**

**Do not remove or insert a C-PLUG during operation**


The C-PLUG may only be removed or inserted when the device is turned off.

The C-PLUG slot is on the top of the device housing.

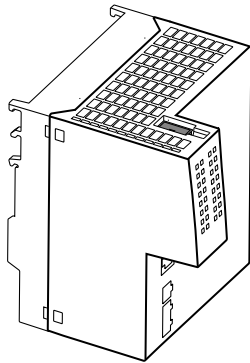


### Replacing a C-PLUG.

#### Removing a C-PLUG

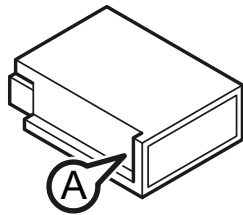

1. Turn off the power to the device.
2. Insert a screwdriver between the front edge of the C-PLUG (A) and the slot and release the C-PLUG.
3. Remove the C-PLUG.

### Inserting a C-PLUG

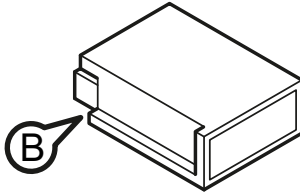

1. Turn off the power to the device.
2. The housing of the C-PLUG has a protruding ridge on the long side (B). The slot has a groove at this position. Insert the C-PLUG correctly oriented into the slot.

## 4.7 Functions

### 4.7.1 Combo ports

#### Characteristics

Combo port is the name for two communication ports. A combo port has the two following jacks:

- a fixed RJ-45 port
- an SFP transceiver slot that can be equipped individually

Of these two ports, only one can ever be active. Using the mode, you can decide how the ports are prioritized.

The port name is the same on both jacks of the combo port, for example "PxC".

There is an LED for each combo port. The LEDs for the combo ports can be identified by a vertical line and the word "COMBO". The labeling of the combo port LEDs does not differ from that of the other LEDs, e.g. "P3".

#### Setting the mode

The following modes can be configured for a combo port:

- Mode 1: **auto**  
The SFP transceiver port has priority. As soon as an SFP transceiver is plugged in, an existing connection at the fixed RJ-45 port is terminated. If no SFP transceiver is plugged in, a connection can be established via the fixed RJ-45 port.
- Mode 2: **rj45**  
The fixed RJ-45 port is independent of the SFP transceiver port.
- Mode 3: **sfp**  
The pluggable transceiver port is used independent of the fixed RJ-45 port.

The factory setting for the combo ports is mode 1: auto

You configure the mode with Web Based Management or the Command Line Interface.

#### *4.7 Functions*

# Mounting

## 5.1 Safety notices for installation

### Safety notices

When installing the device, keep to the safety notices listed below.

 <b>WARNING</b>
--

If a device is operated in an ambient temperature of more than 60 to 70 °C, the temperature of the device housing may be higher than 70 °C. The device must therefore be installed so that it is only accessible to service personnel or users that are aware of the reason for restricted access and the required safety measures at an ambient temperature higher than 60 °C.
---

 <b>WARNING</b>
--

If the device is installed in a cabinet, the inner temperature of the cabinet corresponds to the ambient temperature of the device.
---

### Safety notices on use in hazardous areas

#### General safety notices relating to protection against explosion

 <b>WARNING</b>
--

<b>EXPLOSION HAZARD</b>
-------------------------

Replacing components may impair suitability for Class 1, Division 2 or Zone 2.
--

 <b>WARNING</b>
--

The device is intended for indoor use only.
---

 <b>WARNING</b>
--

The device may only be operated in an environment with pollution degree 1 or 2 (see IEC 60664-1).
---

 **WARNING**

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

**Safety notices for use according to ATEX and IECEx**

If you use the device under ATEX or IECEx conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 **WARNING**

The equipment shall only be used in an area of not more than pollution degree 2, as defined in EN/IEC 60664-1.

 **WARNING**

**Requirements for the cabinet/enclosure**

The equipment shall be installed in a suitable enclosure that provides a degree of protection not less than IP54 in accordance with EN/IEC 60079-15.

 **WARNING**

If the cable or conduit entry point exceeds 70 °C or the branching point of conductors exceeds 80 °C, special precautions must be taken. If the equipment is operated in an air ambient in excess of 60 °C, only use cables with admitted maximum operating temperature of at least 80 °C.

**Devices with approval [op is Gb] for optical interfaces**

Some devices have an additional ATEX approval according to II 3 (2) G Ex nA [op is Gb] IIC T4 Gc and an additional approval in compliance with IECEx according to Ex nA [op is Gb] IIC T4 Gc, see section "Certifications and approvals (Page 127)". This is indicated on the type plate. With these devices the FO bus connections may run through or in a Zone 1 hazardous area.

**Safety notices when using according to FM**

If you use the device under FM conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 **WARNING**

**EXPLOSION HAZARD**

For operation the device is intended to be installed within an enclosure/control cabinet. The inner temperature of the enclosure/control cabinet corresponds to the ambient temperature of the device. Use installation wiring connections with admitted maximum operating temperature of at least 30 °C higher than maximum ambient temperature.

**WARNING**

Wall mounting outside of the control cabinet or housing does not fulfill the requirements of the FM approval.

**WARNING**

Wall mounting is only permitted if the requirements for the housing, the installation regulations, the clearance and separating regulations for the control cabinets or housings are adhered to. The control cabinet cover or housing must be secured so that it can only be opened with a tool. An appropriate strain-relief assembly for the cable must be used.

**Safety notices when using the device according to ATEX/IECEx and FM**

If you use the device under ATEX/IECEx or FM conditions, you must also observe the following safety notices in addition to the general safety notices for protection against explosion:

**Note**

You must not install the device on a wall in hazardous areas.

**Further notes****NOTICE****Warming and premature aging of the network component due to direct sunlight**

Direct sunlight can heat up the device and can lead to premature aging of the network component and its cabling.

Provide suitable shade to protect the network component against direct sunlight.

## 5.2 General notes for SFP transceivers

### WARNING

#### Use only approved SFP transceivers

If you use SFP transceivers that have not been approved by Siemens AG, there is no guarantee that the device will function according to its specifications.

If you use unapproved SFP transceivers, this can lead to the following problems:

- Damage to the device
- Loss of the approvals
- Violation of the EMC regulations

Use only approved pluggable transceivers.

### Note

#### Plugging and pulling during operation

You can plug and pull pluggable transceivers with the device in operation.

## Documentation for SFP transceivers

You will find detailed information in the operating instructions of the pluggable transceivers, see the chapter "Introduction (Page 7)" section "Additional documentation".

## 5.3 Types of installation

### Note

#### Devices with or without fastening plate

During installation, check whether the device has a fastening plate or not. Refer to section "Device views (Page 25)" to learn which devices have a fastening plate.

All SCALANCE XC-200 devices allow the following mounting methods:

- DIN rail
- S7-300 standard rail
- S7-1500 standard rail

Only devices with a fastening plate additionally permit the following mounting type:

- Wall mounting





### Installation clearance

Keep to the minimum clearances so that the convection ventilation of the device is not blocked.

- Below at least 10 cm
- Above at least 10 cm

### Installation location

Depending on the device, the following mounting positions are permissible:

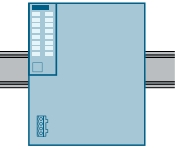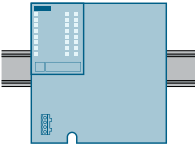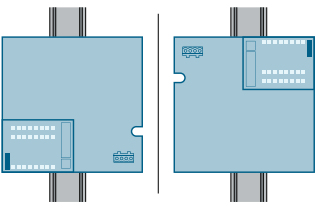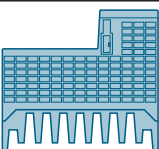Installation location	Devices with fastening plate	Devices without fastening plate
Horizontal Horizontal installation of the rack (DIN rail).		
Vertical Vertical installation of the rack (DIN rail).	-	
On side with the interfaces pointing upwards	-	

## 5.4 Installation on a DIN rail

### 5.4.1 Top-hat rail mounting with fastening plate

#### Installation

##### Note

Note the position of the securing bar, see also section “Dimension drawings SCALANCE XC-200 (Page 121)”.

When supplied, the securing bar is in the wall mounting position. To change the position of the securing bar, refer to the section “Changing the position of the securing bar (Page 59)”.

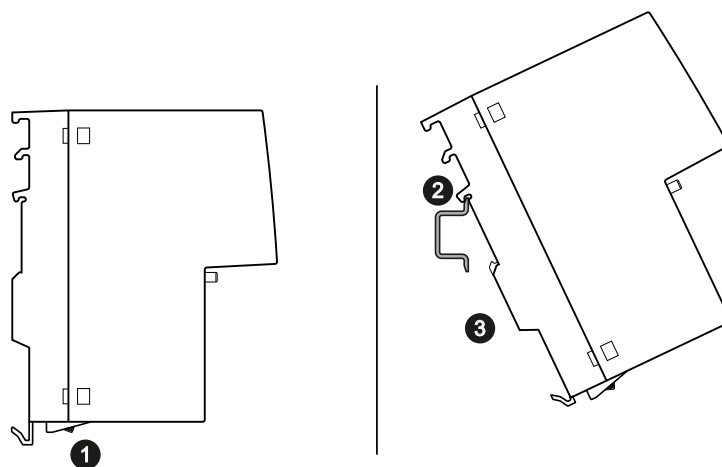


Figure 5-1 DIN rail mounting with securing bar in the wall mounting position.

**Securing bar in the wall mounting position (as supplied).**

To install the device on a 35 mm DIN rail complying with DIN EN 60715, follow the steps below:

1. Loosen the knurled screw with your hand or a screwdriver.
2. Place the third housing guide of the device on the top edge of the DIN rail.
3. Press the device down against the DIN rail until the spring securing bar locks in place.
4. When you tighten the knurled screw, you cannot release the securing bar (torque 0.5 Nm). The device is additionally fixed.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 61)".

**Removal**

To remove the device from a DIN rail, follow the steps below:

1. Disconnect all connected cables.
2. If necessary, loosen the knurled screw with your hand or a screwdriver.
3. Lever the securing bar down using a screwdriver as far as it will go.
4. Pull the device away from the bottom of the DIN rail with the bar pulled.

## 5.4.2 Top-hat rail mounting without fastening plate

### Installation



#### WARNING

##### Danger of injury by falling objects

The 35 mm DIN rail does not provide adequate support in shipping or when there is severe vibration ( $> 10\text{ g}$ ). When used under these conditions, the device can detach itself and may cause injury to persons.

When used in shipbuilding or when extreme vibration can be expected, mount the device on a S7 standard rail.

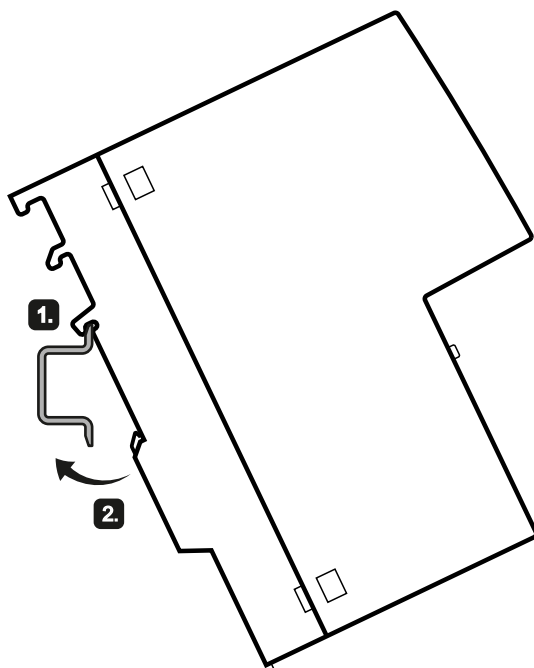


Figure 5-2 DIN rail mounting

To install the device on a 35 mm DIN rail complying with DIN EN 60715, follow the steps below:

1. Place the third housing guide of the device on the top edge of the DIN rail ①.
2. Press the device down against the DIN rail until the spring catch locks in place ②.
3. Connect the electrical connecting cables; refer to the section "Connecting up (Page 61)".

### Removal

To remove the device from a DIN rail, follow the steps below:

1. Disconnect all connected cables.
2. Release the DIN rail catch on the bottom of the device using a screwdriver.
3. Pull lower part of the device away from the DIN rail.

## 5.5 Installation on a standard S7-300 rail

### 5.5.1 Installation on a standard rail S7-300 with fastening plate

#### Installing on an S7-300 standard rail

---

##### Note

Note the position of the securing bar, see also section "Dimension drawings SCALANCE XC-200 (Page 121)".

When supplied, the securing bar is in the wall mounting position. To change the position of the securing bar, refer to the section "Changing the position of the securing bar (Page 59)".

---

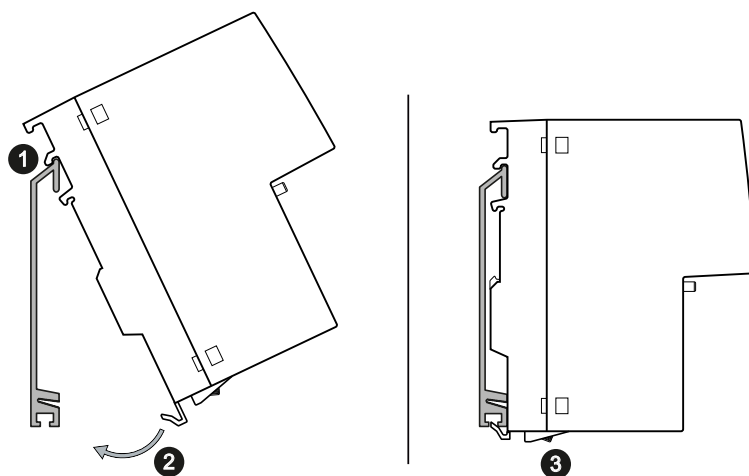


Figure 5-3 S7-300 mounting rail installation with the securing bar in the wall mounting position.

##### Securing bar in the wall mounting position (as supplied).

To install the device on an S7-300 standard rail, follow the steps below:

1. Place the second housing guide of the device on the top edge of the standard rail.
2. Swing the device down towards the back against the mounting rail.
3. Loosen the knurled screw with your hand or a screwdriver. The spring mounted securing bar locks in place.
4. When you tighten the knurled screw, you cannot release the securing bar (torque 0.5 Nm). The device is additionally fixed.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 61)".

## Removal

To remove the device from a standard rail, follow the steps below:

1. Disconnect all connected cables.
2. If necessary, loosen the knurled screw with your hand or a screwdriver.
3. Lever the securing bar down using a screwdriver as far as it will go.
4. Remove the device from the mounting rail with the bar pulled.

## 5.5.2 Installation on a standard rail S7-300 without fastening plate

### Installing on an S7-300 standard rail

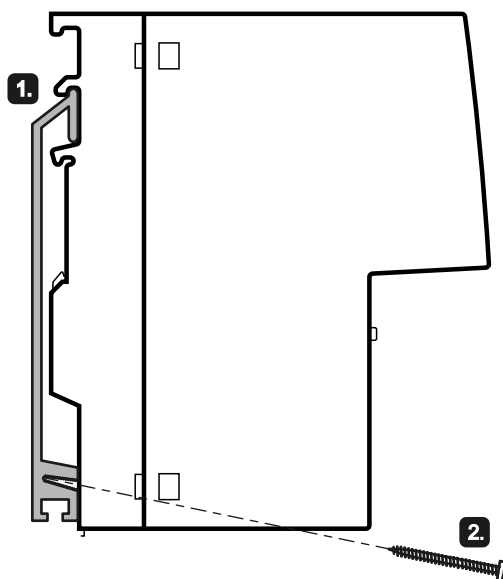


Figure 5-4 S7-300 standard rail mounting

To screw the device to an S7-300 standard rail, you require a securing screw with the following properties:

- Self-tapping screw 4 x 45 mm
- Screw head diameter: max. 7 mm

To install the device on an S7-300 standard rail, follow the steps below:

1. Place the second housing guide of the device on the top edge of the standard rail ①.
2. Screw the device to the lower part of the standard rail with the supplied securing screw ② (tightening torque 1.5 Nm), see also "Device views (Page 25)".
3. Connect the electrical connecting cables; refer to the section "Connecting up (Page 61)".

## Removal

To remove the device from a standard rail, follow the steps below:

1. Disconnect all connected cables.
2. Release the screw on the underside of the standard rail.
3. Remove the device from the standard rail.

## 5.6 Installation on a standard rail S7-1500

### 5.6.1 Installation on a standard rail S7-1500 with fastening plate

#### Installing on an S7-1500 standard rail

---

##### Note

Note the position of the securing bar, see also section “Dimension drawings SCALANCE XC-200 (Page 121)“.

When supplied, the securing bar is in the wall mounting position. To change the position of the securing bar, refer to the section “Changing the position of the securing bar (Page 59)“.

---

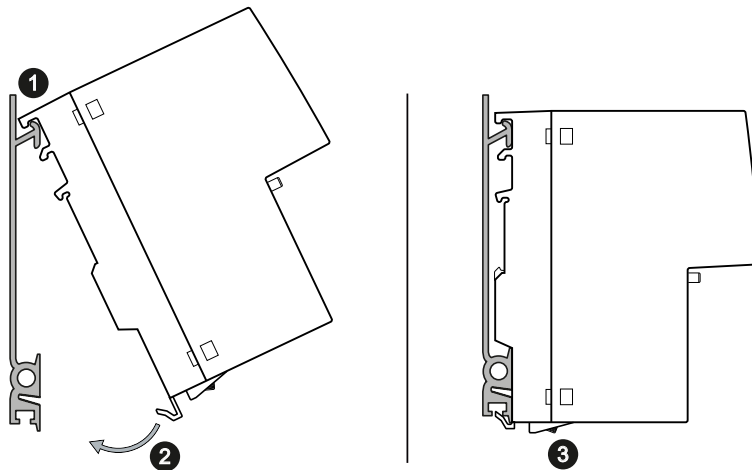


Figure 5-5 S7-1500 mounting rail installation with the securing bar in the wall mounting position.

##### Securing bar in the wall mounting position (as supplied).

To install the device on an S7-1500 standard rail, follow the steps below:

1. Place the first housing guide of the device on the top edge of the standard rail.
2. Swing the device down towards the back against the mounting rail.
3. Loosen the knurled screw with your hand or a screwdriver. The spring mounted securing bar locks in place.

4. When you tighten the knurled screw, you cannot release the securing bar (torque 0.5 Nm). The device is additionally fixed.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 61)".

## Removal

To remove the device from a standard rail, follow the steps below:

1. Disconnect all connected cables.
2. If necessary, loosen the knurled screw with your hand or a screwdriver.
3. Lever the securing bar down using a screwdriver as far as it will go.
4. Remove the device from the mounting rail with the bar pulled.

### 5.6.2 Installation on a standard rail S7-1500 without fastening plate

#### Installing on an S7-1500 standard rail

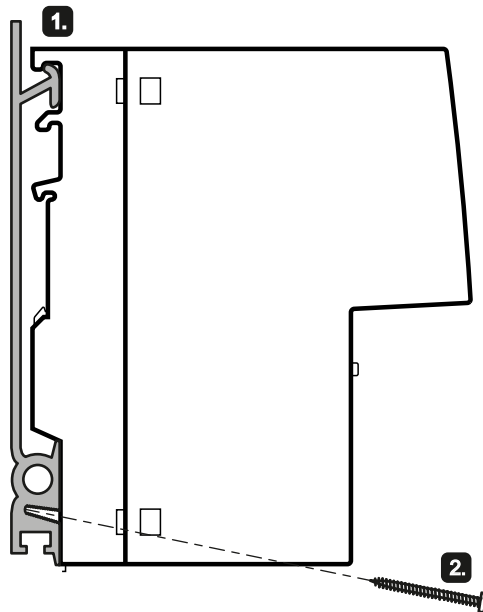


Figure 5-6 S7-1500 standard rail mounting

To screw the device to an S7-1500 standard rail, you require a securing screw with the following properties:

- Self-tapping screw 4 x 45 mm
- Screw head diameter: max. 7 mm

To install the device on an S7-1500 standard rail, follow the steps below:

1. Place the first housing guide of the device on the top edge of the standard rail ①.
2. Screw the device to the lower part of the standard rail with the supplied securing screw ② (tightening torque 1.5 Nm), see also "Device views (Page 25)".
3. Connect the electrical connecting cables; refer to the section "Connecting up (Page 61)".

## Removal

To remove the device from a standard rail, follow the steps below:

1. Disconnect all connected cables.
2. Release the screw on the underside of the standard rail.
3. Remove the device from the standard rail.

## 5.7 Wall mounting with fastening plate

### Preparation

Note the position of the securing bar, see also section "Dimension drawings SCALANCE XC-200 (Page 121)".

When supplied, the securing bar is in the wall mounting position. You do not need to prepare the device any further.

If the securing bar is in the rail mounting position, note the section "Changing the position of the securing bar (Page 59)".

### Tools

To mount the device on a wall, you require the following:

- 2 wall plugs
- 2 fillister head screws

---

#### Note

Depending on the mounting surface, use suitable fittings.

---

### Assembly

---

#### Note

The wall mounting must be capable of supporting at least four times the weight of the device.


---

To mount the device on a wall, follow the steps below:

1. Prepare the wall mounting with drilled holes and plugs. For the precise dimensions, refer to the section "Dimension drawings (Page 121)".
2. Turn the upper screw in to the wall so that 10 mm remains jutting out.
3. Hang the device with the keyhole hanging mechanism on the rear on the screw.
4. Fix the device to the wall with the lower screw.
5. Connect the electrical connecting cables, refer to the section "Connecting up (Page 61)".

## 5.8 Changing the position of the securing bar

Rail mounting position - wall mounting position

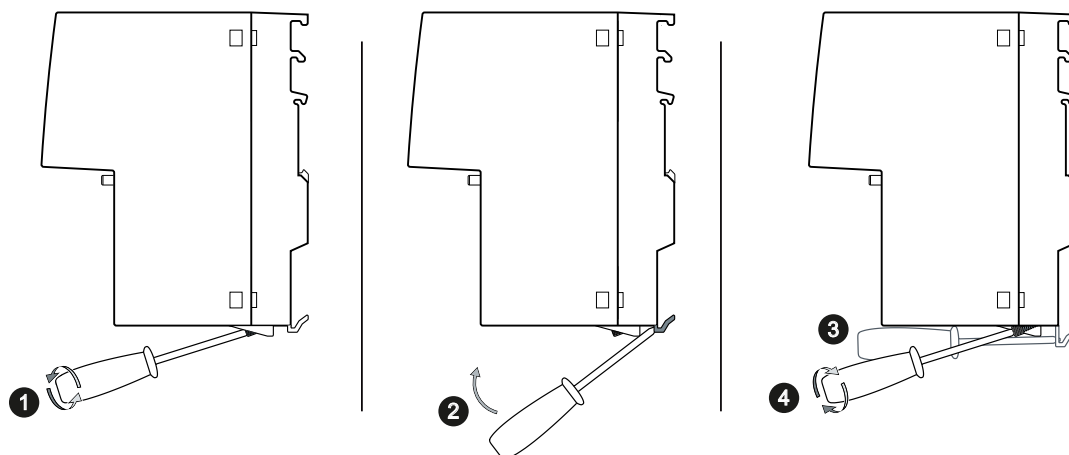

To change the securing bar from the rail mounting position to the wall mounting position follow the steps below:

1. If necessary, loosen the knurled screw with your hand or a screwdriver.
2. Move the securing bar down as far as it will go.
  - Use the levering aid and level the securing bar down using a screwdriver into this position.
  - Push the securing bar down using your hand.
3. Hold the securing bar in this position.
  - Hold the securing bar with the screwdriver.
  - Use the gap on the rear of the device and fix the securing bar briefly with a pin.
4. Tighten the knurled screw (torque 0.5 Nm).  
The securing bar is fixed in the wall mounting position.
5. Remove the pin.

*5.8 Changing the position of the securing bar*

**Wall mounting position - rail mounting position**

To move the securing bar from the wall mounting position to the rail mounting position, loosen the knurled screw.

## Connecting up

### Safety notices for operation with a power supply according to NEC Class 2

Operate the device with a power supply according to NEC Class 2. When connecting up the device, keep to the safety notices listed below.

 **WARNING**

The equipment is designed for operation with Safety Extra-Low Voltage (SELV) by a Limited Power Source (LPS).

This means that only SELV / LPS complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 must be connected to the power supply terminals, or the power supply unit for the equipment power supply must comply with NEC Class 2, as described by the National Electrical Code (r) (ANSI / NFPA 70).

If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.

 **WARNING**

**Insulation of external power supplies**

Ext. circuits intended to be connected to this device shall be galv. separated from hazardous live voltage by reinforced or double insulation.

---

**Note**

**Protective ground**

A PELV circuit contains a connection to protective ground. Without a connection to protective ground, or in case there is a fault in the connection to the protective ground, the voltage for the circuit is not stabilized.

---

**Note**

Minimum temperature rating of the cable to be connected to the field wiring terminals, 90 °C.

### Safety notices for operation with a power supply not complying with NEC Class 2

If you operate the device in a control cabinet, you can use a power supply that does not comply with NEC Class 2. When connecting up the device, keep to the safety notices listed below.

**! WARNING****Safety extra low voltage**

The device is designed for operation with a directly connectable safety extra-low voltage (SELV) according to UL/IEC 61010-1 and UL/IEC 61010-2-201 whose output power corresponds to "Limited Energy" according to UL/IEC 61010-1.

**NOTICE****Suitable fuse for the power supply cables (corresponds to "Limited Energy")**

The current on the terminal may not exceed 3 A. Use a fuse for the power supply that is suitable for protection of AC/DC power supply circuits \*) and protects against currents > 3 A.

- In areas subject to the NEC or CEC, the fuse must meet the following requirements:
  - Suitable for AC/DC \*) (min. 60 V / 3 A)
  - Breaking current at least 10 kA
  - Approval according to ANSI/UL 248-14 (suppl. fuses), ANSI/UL 248-4 (Class CC), ANSI/UL 248-8 (J), ANSI/UL 248-15 (T), or CSA C22.2-4 No. 248.14 (suppl. fuses), No. 248-4 (Class CC), No. 248-8 (J), No. 248-15 (T)
- In other areas, the fuse must meet the following requirements:
  - Suitable for AC/DC \*) (min. 60 V / 3 A)
  - Breaking current at least 10 kA
  - Approval according to IEC/EN 60947-1/2/3 or IEC/EN 60898-1/2 for circuit breakers
  - Breaking characteristics: B or C
  - Approval according to IEC/EN 60127-1 for fuses
  - Breaking characteristics: max. 120 s at  $2 \times I_n$  (corresponds to melting integral  $I^2t < 4320$ )

If the properties of the supplying current source are known, the following fuse is also possible:

- In areas subject to the NEC or CEC, the fuse must meet the following requirements:
  - Suitable for AC/DC \*) (min. 60 V / 3 A)
  - Breaking current > highest possible current of the current source (incl. short circuit current and fault)
  - Approval according to UL 1077 or CSA C22.2 No. 235
- In other areas, the fuse must meet the following requirements:
  - Suitable for AC/DC \*) (min. 60 V / 3 A)
  - Breaking current > highest possible current of the current source (incl. short circuit current and fault)
  - Approval according to IEC/EN 60934
  - Breaking characteristics: max. 120s at  $2 \times I_n$

\*) AC or DC depending on availability

## Safety notices on use in hazardous areas

### General safety notices relating to protection against explosion

 <b>WARNING</b>
--

<b>EXPLOSION HAZARD</b>
-------------------------

Do not connect or disconnect cables to or from the device when a flammable or combustible atmosphere is present.
--

### Safety notices when using the device according to Hazardous Locations (HazLoc)

If you use the device under HazLoc conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 <b>WARNING</b>
--

<b>EXPLOSION HAZARD</b>
-------------------------

You may only connect or disconnect cables carrying electricity when the power supply is switched off or when the device is in an area without inflammable gas concentrations.
---

### Safety notices for use according to ATEX and IECEx

If you use the device under ATEX or IECEx conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 <b>WARNING</b>
--

Take measures to prevent transient voltage surges of more than 40% of the rated voltage. This is the case if you only operate devices with SELV (safety extra-low voltage).
---

 <b>WARNING</b>
--

Provisions shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 119 V.
---

 <b>WARNING</b>
--

<b>EXPLOSION HAZARD</b>
-------------------------

Do not press the SELECT/SET button when there is an explosive atmosphere.
---

### Safety notices when using according to FM

If you use the device under FM conditions you must also keep to the following safety notices in addition to the general safety notices for protection against explosion:

 **WARNING**

**EXPLOSION HAZARD**

Do not disconnect while circuit is live unless area is known to be non-hazardous.

**Safety notices when using the device according to ATEX/IECEX and FM**

If you use the device under ATEX/IECEX or FM conditions, you must also observe the following safety notices in addition to the general safety notices for protection against explosion:

 **WARNING**

**Explosion hazard**

Do not disconnect equipment when a flammable or combustible atmosphere is present.

 **WARNING**

Do not remove or replace while circuit is live when a flammable or combustible atmosphere is present.

**Further notes**

 **WARNING**

**Safety notice for connecting with a LAN ID (Local Area Network)**

A LAN or LAN segment with all the interconnected devices should be contained completely in a single low voltage power distribution in a building. The LAN is designed either for "Environment A" according to IEEE802.3 or "Environment 0" according to IEC TR 62102.

Do not connect any electrical connectors directly to the telephone network (telephone network voltage) or a WAN (Wide Area Network).

## 6.1 Wiring rules

When wiring use cables with the following AWG categories or cross sections.

Wiring rules for ...		Screw/spring-loaded terminals
connectable cable cross sections for flexible cables ...	without wire end ferrule	0.25 - 2.5 mm <sup>2</sup>
		AWG: 24 - 13
	with wire end ferrule with plastic ferrule**	0.25 - 2.5 mm <sup>2</sup>
		AWG: 24 - 13
	with wire end ferrule without plastic ferrule**	0.25 - 2.5 mm <sup>2</sup>
		AWG: 24 - 13
with TWIN wire end ferrule**	0.5 - 1 mm <sup>2</sup>	
	AWG: 20 - 17	
Stripped length of the cable		8 - 10 mm
Wire end ferrule according to DIN 46228 with plastic ferrule**		8 - 10 mm

\* AWG: American Wire Gauge

\*\* See note "Wire end ferrules"

### Note


#### Wire end ferrules

Use crimp shapes with smooth surfaces, such as provided by square and trapeze shaped crimp cross sections.

Crimp shapes with wave-shaped profile are unsuitable.

## 6.2 Power supply

### Notes on the power supply

 <b>WARNING</b>
<b>Incorrect power supply</b>
When the device is connected to a redundant power supply (two separate power supplies), both must meet these requirements.
Never operate the device with AC voltage or DC voltage higher than 32 V DC.

**! CAUTION****Damage to the device due to overvoltage**

The connector of the external power supply is not protected against strong electromagnetic pulses that can, for example, result from lightning strikes or switching large loads.

One of the tests used to attest the immunity of devices of the IE switches SCALANCE XC-200 to electromagnetic interference was the "surge immunity test" according to EN61000-4-5. This test requires overvoltage protection for the power supply lines. A suitable device is, for example, the Dehn Blitzductor BVT AVD 24, article number 918 422 or a comparable protective element.

Manufacturer: DEHN+SOEHNE GmbH+Co. KG, Hans-Dehn-Str.1, Postfach 1640, D92306 Neumarkt, Germany

Operate the SCALANCE XC-200 with suitable overvoltage protection.

**Note**

The device can be disconnected from the power supply by pulling off the terminal block.

**Information on the power supply**

- The "L1" and "L2" LEDs indicate the current range of the power supply, see the section "LEDs "L1" and "L2" (Page 39)".
- The power supply is connected using a 4-pin plug-in terminal block (spring-loaded terminal). The terminal block ships with the device and can also be ordered as a spare part.
- The power supply can be connected redundantly. Both inputs are isolated. There is no distribution of load. When a redundant power supply is used, the power supply unit with the higher output voltage supplies the device alone.
- The power supply is connected over a high resistance with the enclosure to allow an ungrounded set up. The two power inputs are non-floating.
- Note the wiring rules.

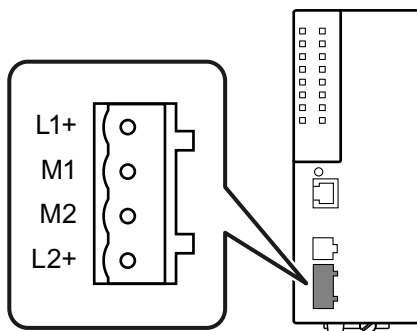
**Position and assignment**

Figure 6-1 Position of the power supply based, for example on the SCALANCE XC-200 with 8 ports and assignment of the terminal block

Contact	Assignment
L1+	24 VDC
M1	Ground
M2	Ground
L2+	24 VDC

## 6.3 Signaling contact

### Information on the signaling contact

- The signaling contact is a floating switch that signals error statuses by opening the contact. The signaling contact must be operated within the range of the operating voltage. If an error/fault occurs, the signaling contact opens. In normal operation, the signaling contact is closed.
- The signaling contact is connected using a 2-pin plug-in terminal block (spring-loaded terminal). The terminal block ships with the device and can also be ordered as a spare part.
- Note the wiring rules.

#### NOTICE

##### Damage due to voltage being too high

The signaling contact can be subjected to a maximum load of 100 mA (safety extra-low voltage SELV, 24 VDC).

Higher voltages or currents can damage the device.

### Position and assignment

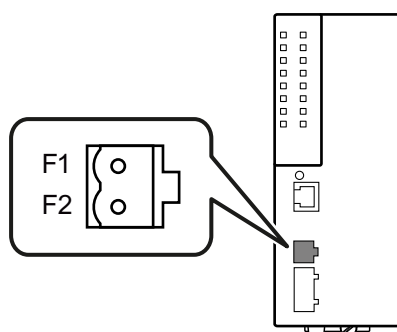


Figure 6-2 Position of the signaling contact based, for example on the SCALANCE XC-200 with 8 ports and assignment of the terminal block

Contact	Assignment
F1	Fault contact 1
F2	Fault contact 2

## Signaling faults

- The signaling of errors by the signaling contact is synchronized with the fault LED "F", see section ""F" LED (Page 38)".  
All errors that the fault LED "F" indicates (freely configurable) are also signaled by the signaling contact.
- If an internal fault occurs, the fault LED "F" lights up and the signaling contact opens.
- If you connect a communications node to an unmonitored port or disconnect it, this does not cause an error message.
- The signaling contact remains open until one of the following events occurs:
  - The problem is eliminated.
  - The current status is entered in the fault mask as the new desired status.

## 6.4 Functional ground


EMC disturbances are diverted to ground via the functional ground. This ensures the immunity of the data transmission.

The functional ground must be implemented with low impedance. The connection of the functional ground must be established directly on the mounting plate or the DIN rail terminal.

The IE switch has a grounding screw (fillister head screw with clamping washer und disk) for functional ground, refer to the section "Device views (Page 25)".

The grounding screw is identified by the following symbol for the functional ground .

Follow the steps below to connect the functional ground:

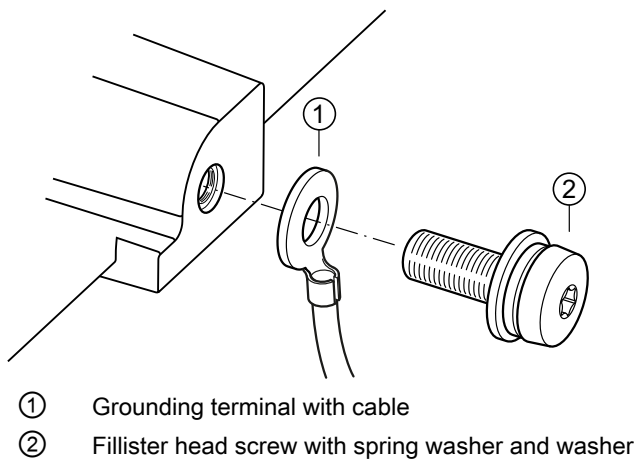

1. Loosen the grounding screw).
2. Put the grounding terminal and grounding screw together.
3. Tighten the grounding screw with a maximum torque of 0.75 Nm.

## Protective/functional ground

The connection of the reference potential surface with the protective ground system is normally in the cabinet close to the power feed-in. This ground conducts fault currents to ground safely and according DIN/VDE 0100 is a protective ground to protect people, animals and property from too high contact voltages.

Apart from the protective ground, there is functional grounding in the cabinet. According to EN60204-1 (DIN/VDE 0113 T1) electrical circuits must be grounded. The chassis (0 V) is grounded at one defined point. Here, once again the grounding is implemented with the lowest leakage resistance to ground in the vicinity of the power feed-in.

With automation components, functional ground also ensures interference-free operation of a controller. Via the functional ground, interference currents coupled in via the connecting cables are discharged to ground.

## 6.5 Industrial Ethernet

### 6.5.1 Electrical

---

#### Note

##### Strain relief for the Ethernet cables

In order to avoid mechanical stress on the Ethernet cables and resulting interruption of the contact, fasten the cables at a short distance from the connector using a cable guide or busbar.

---

---

#### Note

##### Unlocking the plug with a screwdriver

If installation space is limited, you can unlock the connectors using a screwdriver, see also "SIMATIC NET: IE FC RJ45 Plug 4x2 CAT 6A (<https://support.industry.siemens.com/cs/ww/en/view/102047916>)".


---

## R-45 connector technology

The attachment to Industrial Ethernet uses RJ-45 connected technology with MDI-X assignment.

## Pin assignment

The following table shows the pin assignment of the R-45 connectors.

Pin number	Assignment		R-45 connector
	10/100 Mbps	10/100/1000 Mbps	
Pin 1	RD+	D1+	
Pin 2	RD-	D1-	
Pin 3	TD+	D2+	
Pin 4	n. c. (Not connected)	D3+	
Pin 5	n. c. (Not connected)	D3-	
Pin 6	TD-	D2-	
Pin 7	n. c. (Not connected)	D4+	
Pin 8	n. c. (Not connected)	D4-	

## MDI / MDI-X autocrossover

With the MPI/MDI-X autocrossover function, the send and receive contacts of an Ethernet port are assigned automatically. The assignment depends on the cable with which the communications partner is connected. This means that it does not matter whether the port is connected using a patch cable or crossover cable. This prevents malfunctions resulting from mismatching send and receive wires. This makes installation much easier for the user.

### Note

#### Formation of loops

Please note that the direct connection of two ports on the IE switch or accidental connection over several IE switches causes an illegal loop. Such a loop can lead to network overload and network failures.

## Autonegotiation

Autonegotiation means the automatic detection/negotiation of the transmission rate and the operating mode of ports at the opposite end. This makes it possible to configure different devices automatically.

Two components connected to a link segment can exchange information about the transfer and can adapt their settings to each other. The mode with the highest possible speed is set.

### Note

- If a port is set permanently to full duplex, the connected partner port must also be set to full duplex.
- If a port operating in the "Auto negotiation" mode is connected to a partner port that is not operating in the "Auto negotiation" mode, the partner port setting must be fixed at 100 Mbps or 10 Mbps half duplex mode.
- If you disable the "Auto negotiation" function, the "MDI/MDI-X autocrossover" function is also turned off. Then use a crossover cable.

## 6.5.2 Optical

### NOTICE

#### Failure of the data traffic due to contamination of optical plug-in connections

Optical sockets and plugs are sensitive to contamination of the end face. Contamination can lead to the failure of the optical transmission network. Take the following precautions to avoid functional impairments:

- Clean the end face of field-assembled connectors carefully before connecting. No residues of processing may remain on the connector.
- Only remove the dust caps of optical transceivers and pre-configured cables shortly before connecting the cables.
- Close unused optical sockets and plugs as well as pluggable transceivers and slots with the supplied protective caps.

 
### Note

#### No light power measurement (PROFINET diagnostics)

The devices do not support diagnostics with light power measurement.


### SC connectors

The attachment to Industrial Ethernet uses SC connector technology (Subscriber Connector).



### ST/BFOC connectors

 The attachment to Industrial Ethernet uses ST/BFOC connector technology (Straight Tip/Bayonet Fiber Optic Connector).



### LC connector technology

The attachment to Industrial Ethernet uses LC connector technology (Lucent Connector).



Pluggable transceiver slot/  
plugged in transceiver

## 6.6 Serial interface

### Information on the serial interface

- Via the serial interface on the device (RJ-11 jack), you can access the Command Line Interface of the device directly via an RS-232 (115200 8N1) connection without assigning an IP address.
- Access to the device is possible independent of the Ethernet ports.
- To connect the serial interface to a PC, you require a cable with an RJ-11 plug and 9-pin D-sub female connector. The connecting cable for the serial interface can be ordered as an accessory.

### Position and assignment

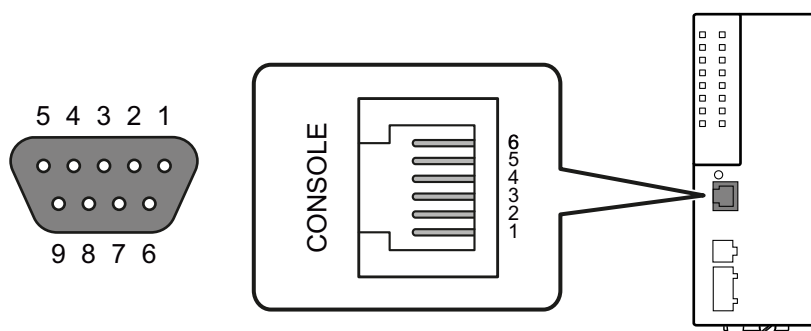


Figure 6-3 Position and pin assignment of the serial interface (RJ-11 jack), based for example on the XC-200 with 8 ports as well as the pin assignment of the D-sub socket.

### Assignment of the terminal block

The connecting cable has the following assignment:

Contact	Pin assignment of the RJ-11 plug	Pin assignment of the D-sub female connector
1	-	-
2	-	TD (Transmit Data)
3	TD (Transmit Data)	RD (Receive Data)
4	SG (Signal Ground)	-
5	RD (Receive Data)	SG (Signal Ground)
6	-	-
7		-
8		-
9		-

---

**Note**

**Pin assignment of the RJ-11 jack on the device**

The RJ-11 jack on the device has a pinout to match the RJ-11 plug of the connecting cable.

---



## Maintenance

<b>NOTICE</b>
<b>Cleaning the housing</b> Only clean the outer parts of the housing with a dry cloth. Do not use any liquids or solvents.



# Troubleshooting

## 8.1 Downloading new firmware using TFTP without WBM and CLI

### Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

### Procedure with Microsoft Windows

Using TFTP, you can supply a device with new firmware even when it cannot be reached using WBM or CLI. This section explains the procedure based on the example of Microsoft Windows.

Follow the steps below to load new firmware using TFTP:

1. Turn off the power to the device.
2. Press the button and reconnect the power supply to the device while holding down the button.
3. Hold down the button until the red fault LED "F" starts to flash.
4. Release the button as long as the red error LED is still flashing..

---

#### Note

This time only lasts a few seconds.

---

The bootloader of the device waits in this status for a new firmware file that you can download by TFTP.

5. Connect a PC to port "P1" via an Ethernet cable.
6. Assign an IP address to the device using DHCP or the Primary Setup Tool.
7. Open a Windows command prompt and change to the directory where the file with the new firmware is located and then execute the following command :  
`tftp -i <IP address> put <firmware file>`

---

#### Note

You can enable TFTP in Microsoft Windows as follows:

"Control Panel" > "Programs and Features" > "Turn Windows features on or off" > "TFTP Client".

---

8. Once the firmware has been transferred completely to the device and validated, there is an automatic restart on the device. This may take several minutes.

## 8.2 Restoring the factory settings

<b>NOTICE</b>
<b>Previous settings</b> If you reset, all the settings you have made will be overwritten by factory defaults.
<b>NOTICE</b>
<b>Inadvertent reset</b> An inadvertent reset can cause disturbances and failures in the configured network.

### Restoring the factory settings during the startup phase

<b>NOTICE</b>
<b>Reset despite disabled "SELECT/SET" button</b> Using the "SELECT/SET" button, you can always reset the device parameters to the factory defaults during the startup phase of the device. This applies also if the "Reset to Factory Defaults" function was disabled in the configuration. This allows you to reset the device to the factory defaults in an emergency.  If the function has been disabled in the configuration, it is only disabled on completion of the startup phase.

To reset the device to the factory defaults during the startup phase, follow the steps below:

1. Turn off the power to the device.
2. Now press the "SELECT/SET" button and reconnect the power to the device while holding down the button.
3. Hold down the button until the red error LED "F" stops flashing and is permanently lit.
4. Now release the button and wait until the fault LED "F" goes off again.
5. The device starts automatically with the factory defaults.

### Restoring the factory defaults during operation

You can also reset the device to the factory defaults during operation, see section "SELECT / SET button (Page 35)".

# Technical specifications

## 9.1 Technical specifications SCALANCE XC206-2 (ST/BFOC)

The following technical specifications apply to the SCALANCE XC206-2 (ST/BFOC).

Technical specifications		
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	500 mA
	24 VDC	250 mA
Effective power loss		6 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C
		During operation in vertical installation position: -40 °C to +60 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)

## 9.1 Technical specifications SCALANCE XC206-2 (ST/BFOC)

Technical specifications	
Degree of protection	IP20
Dimensions (W x H x D)	60 x 147 x 125 mm
Weight	540 g
Installation options	<ul style="list-style-type: none"> <li>• Wall mounting</li> <li>• Installation on a DIN rail</li> <li>• Mounting on an S7-300 standard rail</li> <li>• Mounting on an S7-1500 standard rail</li> </ul>
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> 46 years


<sup>1)</sup> Note the wiring rules (Page 65).

## Connection to Industrial Ethernet

### Electrical connectors

Properties	
Quantity	6
Connector	RJ-45 jack
Properties	Half/full duplex, MDI-X pinning
Transmission speed	10 / 100 Mbps

### Optical connectors

Optical connectors	
Quantity	2
Connectors	 <p>The attachment to Industrial Ethernet uses ST/BFOC connector technology (Straight Tip/Bayonet Fiber Optic Connector).</p>

Properties		
Transmission mode	100Base-FX complying with IEEE 802.3	
Transmission rate	100 Mbps (Fast Ethernet)	
Transmission medium	Multimode fiber-optic cable	
Light source	LED/Class1-LASER "Eye safe"	
Wavelength	1300 nm	
Cable length (max.) *)	At 50 µm fiber core diameter	3 km
	At 62.5 µm fiber core diameter	3 km

9.2 Technical specifications SCALANCE XC206-2 (SC)

Properties			
Transmitter output (optical)	Minimum	At 50 µm	-23 dBm
		At 62.5 µm	-19 dBm
	Maximum		-14 dBm
Receiver input	Sensitivity min.		-32 dBm
	Input power max.		-3 dBm

\*) Depending on the cable used:

- If you are using at least OM1 fibers (attenuation  $\leq 1.5$  dB/km, bandwidth length product  $\geq 500$  MHz\*km), you can reach a cable length of up to 3 km.
- When are using fibers with attenuation values  $\leq 1$  dB/km, you can reach a cable length of up to 5 km.

You can find additional information in the "Industrial Ethernet / PROFINET Passive network components" System Manual, see also section "Introduction", paragraph "Additional documentation".

## 9.2 Technical specifications SCALANCE XC206-2 (SC)

The following technical specifications apply to the SCALANCE XC206-2 (SC).

Technical specifications		
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	500 mA
	24 VDC	250 mA
Effective power loss		6 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		

## 9.2 Technical specifications SCALANCE XC206-2 (SC)

Technical specifications		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +60 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	540 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 46 years	

 
<sup>1)</sup> Note the wiring rules (Page 65).

## Connection to Industrial Ethernet

### Electrical connectors

Properties	
Quantity	6
Connector	RJ-45 jack
Properties	Half/full duplex, MDI-X pinning
Transmission speed	10 / 100 Mbps

## Optical connectors

Optical connectors		
Quantity	2	
Connectors		
The attachment to Industrial Ethernet uses SC connector technology (Subscriber Connector).		
Properties		
Transmission mode	100Base-FX complying with IEEE 802.3	
Transmission rate	100 Mbps (Fast Ethernet)	
Transmission medium	Multimode fiber-optic cable	
Light source	LED/Class1-LASER "Eye safe"	
Wavelength	1300 nm	
Cable length (max.) *)	At 50 µm fiber core diameter	3 km
	At 62.5 µm fiber core diameter	3 km
Transmitter output (optical)	Minimum	At 50 µm -23 dBm
		At 62.5 µm -19 dBm
	Maximum	-14 dBm
Receiver input	Sensitivity min.	-32 dBm
	Input power max.	-3 dBm

\*) Depending on the cable used:

- If you are using at least OM1 fibers (attenuation  $\leq 1.5$  dB/km, bandwidth length product  $\geq 500$  MHz\*km), you can reach a cable length of up to 3 km.
- When are using fibers with attenuation values  $\leq 1$  dB/km, you can reach a cable length of up to 5 km.

You can find additional information in the "Industrial Ethernet / PROFINET Passive network components" System Manual, see also section "Introduction", paragraph "Additional documentation".

## 9.3 Technical specifications SCALANCE XC206-2SFP

The following technical specifications apply to the SCALANCE XC206-2SFP.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors	Quantity		6
	Connector		RJ-45 jack
	Properties		Half/full duplex, MDI-X pinning
	Transmission speed		10 / 100 Mbps
Slots for pluggable transceivers	Quantity		2
	Connector		SFP transceivers (LC port)
	Transmission speed		100 / 1000 Mbps
Diagnostics interface			
Serial interface	Quantity		1
	Connector		RJ-11 jack
Electrical data			
Power supply <sup>1)</sup>	Rated voltage		12 to 24 V DC
	Voltage range (incl. tolerance)		9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design		Terminal block, 4 terminals
	Properties		Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	Without SFP	400 mA
		With SFP <sup>2)</sup>	500 mA
	24 VDC	Without SFP	200 mA
		With SFP <sup>2)</sup>	250 mA
Effective power loss	Without SFP		4.8 W
	With SFP <sup>2)</sup>		6 W
Overvoltage category			CAT II
Fusing			2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity		1
	Design		Terminal block, 2 terminals
	Permitted voltage range		24 VDC
	Load capability		max. 100 mA
Permitted ambient conditions			

Technical specifications		
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C  During operation in vertical installation position: -40 °C to +70 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• [-] Standard version</li><li>• LD</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +65 °C  During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• LH</li><li>• LH+</li><li>• ELH</li><li>• ELH200</li><li>• SFP992-1+</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C  During operation in vertical installation position: -40 °C to +60 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
	Relative humidity	During operation at 25 °C
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	520 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 47 years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

<sup>3)</sup> Depending on which pluggable transceiver you use, the maximum ambient temperature can change, see section "Accessories", "SFP transceiver (Page 32)".

## 9.4 Technical specifications of SCALANCE XC206-2SFP G

The following technical specifications apply to SCALANCE XC206-2SFP G.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors	Quantity		6
	Connector		RJ-45 jack
	Properties		Half/full duplex, MDI-X pinning
	Transmission speed		10 / 100 / 1000 Mbps
Slots for pluggable transceivers	Quantity		2
	Connector		SFP transceivers (LC port)
	Transmission speed		1000 Mbps
Diagnostics interface			
Serial interface	Quantity		1
	Connector		RJ-11 jack
Electrical data			
Power supply <sup>1)</sup>	Rated voltage		12 to 24 V DC
	Voltage range (incl. tolerance)		9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design		Terminal block, 4 terminals
	Properties		Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	Without SFP	400 mA
		With SFP <sup>2)</sup>	500 mA
	24 VDC	Without SFP	200 mA
		With SFP <sup>2)</sup>	250 mA
Effective power loss	Without SFP		4.8 W
	With SFP <sup>2)</sup>		6 W
Overvoltage category			CAT II
Fusing			2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity		1
	Design		Terminal block, 2 terminals
	Permitted voltage range		24 VDC
	Load capability		max. 100 mA
Permitted ambient conditions			

Technical specifications		
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C  During operation in vertical installation position: -40 °C to +70 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• [-] Standard version</li><li>• LD</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +65 °C  During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• LH</li><li>• LH+</li><li>• ELH</li><li>• SFP992-1+</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C  During operation in vertical installation position: -40 °C to +60 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
	Relative humidity	During operation at 25 °C
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	520 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 55 years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

<sup>3)</sup> Depending on which pluggable transceiver you use, the maximum ambient temperature can change, see section "Accessories", "SFP transceiver (Page 32)".

## 9.5 Technical specifications of SCALANCE XC206-2SFP EEC

The following technical specifications apply to SCALANCE XC206-2SFP EEC.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors	Quantity		6
	Connector		RJ-45 jack
	Properties		Half/full duplex, MDI-X pinning
	Transmission speed		10 / 100 Mbps
Slots for pluggable transceivers	Quantity		2
	Connector		SFP transceivers (LC port)
	Transmission speed		100 / 1000 Mbps
Diagnostics interface			
Serial interface	Quantity		1
	Connector		RJ-11 jack
Electrical data			
Power supply <sup>1)</sup>	Rated voltage		12 to 24 V DC
	Voltage range (incl. tolerance)		9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design		Terminal block, 4 terminals
	Properties		Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	Without SFP	400 mA
		With SFP <sup>2)</sup>	500 mA
	24 VDC	Without SFP	200 mA
		With SFP <sup>2)</sup>	250 mA
Effective power loss	Without SFP		4.8 W
	With SFP <sup>2)</sup>		6 W
Overvoltage category			CAT II
Fusing			2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity		1
	Design		Terminal block, 2 terminals
	Permitted voltage range		24 VDC
	Load capability		max. 100 mA
Permitted ambient conditions			

9.5 Technical specifications of SCALANCE XC206-2SFP EEC

Technical specifications		
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C  During operation in vertical installation position: -40 °C to +70 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• [-] Standard version</li><li>• LD</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +65 °C  During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• LH</li><li>• LH+</li><li>• ELH</li><li>• ELH200</li><li>• SFP992-1+</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C  During operation in vertical installation position: -40 °C to +60 °C
	With operation between 2000 m and 3000 m	The maximum ambient temperature is reduced by 5 °C <sup>4)</sup>
	With operation between 3000 m and 4000 m	The maximum ambient temperature is reduced by 10 °C <sup>4)</sup>
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
	Relative humidity	During operation at 25 °C
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	520 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 47 years	

**1) Wiring rules**

Observe the wiring rules (Page 65).

**2) Pluggable transceiver**

Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

**3) Ambient temperature with SFP**

The maximum ambient temperature during operation depends on the operating elevation and the installed pluggable transceivers, see also the section "SFP transceiver (Page 32)" in the "Accessories" section.

**4) Derating**

The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.6 Technical specifications of SCALANCE XC206-2SFP G EEC

The following technical specifications apply to SCALANCE XC206-2SFP G EEC.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors	Quantity		6
	Connector		RJ-45 jack
	Properties		Half/full duplex, MDI-X pinning
	Transmission speed		10 / 100 / 1000 Mbps
Slots for pluggable transceivers	Quantity		2
	Connector		SFP transceivers (LC port)
	Transmission speed		1000 Mbps
Diagnostics interface			
Serial interface	Quantity		1
	Connector		RJ-11 jack
Electrical data			
Power supply <sup>1)</sup>	Rated voltage		12 to 24 V DC
	Voltage range (incl. tolerance)		9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design		Terminal block, 4 terminals
	Properties		Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	Without SFP	400 mA
		With SFP <sup>2)</sup>	500 mA
	24 VDC	Without SFP	200 mA
		With SFP <sup>2)</sup>	250 mA
Effective power loss	Without SFP		4.8 W
	With SFP <sup>2)</sup>		6 W
Overvoltage category			CAT II
Fusing			2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity		1
	Design		Terminal block, 2 terminals
	Permitted voltage range		24 VDC
	Load capability		max. 100 mA
Permitted ambient conditions			

9.6 Technical specifications of SCALANCE XC206-2SFP G EEC

Technical specifications		
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C  During operation in vertical installation position: -40 °C to +70 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• [-] Standard version</li><li>• LD</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +65 °C  During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• LH</li><li>• LH+</li><li>• ELH</li><li>• SFP992-1+</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C  During operation in vertical installation position: -40 °C to +60 °C
	With operation between 2000 m and 3000 m	The maximum ambient temperature is reduced by 5 °C <sup>4)</sup>
	With operation between 3000 m and 4000 m	The maximum ambient temperature is reduced by 10 °C <sup>4)</sup>
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
	Relative humidity	During operation at 25 °C
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	520 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 55 years	

<sup>1)</sup> Wiring rules

Observe the wiring rules (Page 65).

**2) Pluggable transceiver**

Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

**3) Ambient temperature with SFP**

The maximum ambient temperature during operation depends on the operating elevation and the installed pluggable transceivers, see also the section "SFP transceiver (Page 32)" in the "Accessories" section.

**4) Derating**

The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.7 Technical specifications of the SCALANCE XC208

The following technical specifications apply to the SCALANCE XC208.

Technical specifications		
Connection to Industrial Ethernet		
Electrical connectors	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	350 mA
	24 VDC	175 mA
Effective power loss		4.2 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C
		During operation in vertical installation position: -40 °C to +70 °C
		During storage
		-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)

Technical specifications	
Degree of protection	IP20
Dimensions (W x H x D)	60 x 147 x 125 mm
Weight	520 g
Installation options	<ul style="list-style-type: none"> <li>• Wall mounting</li> <li>• Installation on a DIN rail</li> <li>• Mounting on an S7-300 standard rail</li> <li>• Mounting on an S7-1500 standard rail</li> </ul>
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> 48 years

<sup>1)</sup> Note the wiring rules (Page 65).

## 9.8 Technical specifications of SCALANCE XC208G

The following technical specifications apply to SCALANCE XC208G.

Technical specifications		
Connection to Industrial Ethernet		
Electrical connectors	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 / 1000 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	400 mA
	24 VDC	200 mA
Effective power loss		4.3 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C
		During operation in vertical installation position: -40 °C to +70 °C
		During storage
		-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)

Technical specifications	
Degree of protection	IP20
Dimensions (W x H x D)	60 x 147 x 125 mm
Weight	520 g
Installation options	<ul style="list-style-type: none"> <li>• Wall mounting</li> <li>• Installation on a DIN rail</li> <li>• Mounting on an S7-300 standard rail</li> <li>• Mounting on an S7-1500 standard rail</li> </ul>
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> 54 years

<sup>1)</sup> Note the wiring rules (Page 65).

## 9.9 Technical specifications of SCALANCE XC208EEC

The following technical specifications apply to SCALANCE XC208EEC.

<b>Technical specifications</b>		
<b>Connection to Industrial Ethernet</b>		
Electrical connectors	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
<b>Diagnostics interface</b>		
Serial interface	Quantity	1
	Connector	RJ-11 jack
<b>Electrical data</b>		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	350 mA
	24 VDC	175 mA
Effective power loss		4.2 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
<b>Permitted ambient conditions</b>		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +70 °C
	With operation between 2000 m and 3000 m	The maximum ambient temperature is reduced by 5 °C <sup>2)</sup>
	With operation between 3000 m and 4000 m	The maximum ambient temperature is reduced by 10 °C <sup>2)</sup>
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
<b>Housing, dimensions and weight</b>		

9.9 Technical specifications of SCALANCE XC208EEC

Technical specifications		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	520 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 48 years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.10 Technical specifications of SCALANCE XC208G EEC

The following technical specifications apply to SCALANCE XC208G EEC.

<b>Technical specifications</b>		
<b>Connection to Industrial Ethernet</b>		
Electrical connectors	Quantity	8
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 / 1000 Mbps
<b>Diagnostics interface</b>		
Serial interface	Quantity	1
	Connector	RJ-11 jack
<b>Electrical data</b>		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	400 mA
	24 VDC	200 mA
Effective power loss		4.3 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
<b>Permitted ambient conditions</b>		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +70 °C
	With operation between 2000 m and 3000 m	The maximum ambient temperature is reduced by 5 °C <sup>2)</sup>
	With operation between 3000 m and 4000 m	The maximum ambient temperature is reduced by 10 °C <sup>2)</sup>
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
<b>Housing, dimensions and weight</b>		

9.10 Technical specifications of SCALANCE XC208G EEC

Technical specifications		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	60 x 147 x 125 mm	
Weight	520 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 54 years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.11 Technical specifications of the SCALANCE XC216

The following technical specifications apply to the SCALANCE XC216.

Technical specifications		
Connection to Industrial Ethernet		
Electrical connectors	Quantity	16
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	550 mA
	24 VDC	275 mA
Effective power loss		6.6 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C
		During operation in vertical installation position: -40 °C to +70 °C
		During storage
		-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)

Technical specifications	
Degree of protection	IP20
Dimensions (W x H x D)	120 x 147 x 125 mm
Weight	800 g
Installation options	<ul style="list-style-type: none"> <li>• Wall mounting</li> <li>• Installation on a DIN rail</li> <li>• Mounting on an S7-300 standard rail</li> <li>• Mounting on an S7-1500 standard rail</li> </ul>
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> 48 years

<sup>1)</sup> Note the wiring rules (Page 65).

## 9.12 Technical specifications of SCALANCE XC216EEC

The following technical specifications apply to SCALANCE XC216EEC.

Technical specifications		
Connection to Industrial Ethernet		
Electrical connectors	Quantity	16
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
Diagnostics interface		
Serial interface	Quantity	1
	Connector	RJ-11 jack
Electrical data		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	550 mA
	24 VDC	275 mA
Effective power loss		6.6 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +70 °C
	With operation between 2000 m and 3000 m	The maximum ambient temperature is reduced by 5 °C <sup>2)</sup>
	With operation between 3000 m and 4000 m	The maximum ambient temperature is reduced by 10 °C <sup>2)</sup>
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
Housing, dimensions and weight		

### 9.13 Technical specifications of SCALANCE XC216-4C

Technical specifications		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	120 x 147 x 125 mm	
Weight	800 g	
Installation options	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> 48 years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.13 Technical specifications of SCALANCE XC216-4C

The following technical specifications apply to SCALANCE XC216-4C.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors		Quantity	12
		Connector	RJ-45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 Mbps
Combo ports	Quantity	4	
	Electrical connectors	Quantity	4
		Connector	RJ45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 / 1000 Mbps
	Slots for pluggable transceivers	Quantity	4
		Connector	SFP transceivers (LC port)
		Transmission speed	1000 Mbps
	Diagnostics interface		
Serial interface		Quantity	1
		Connector	RJ-11 jack
Electrical data			

9.13 Technical specifications of SCALANCE XC216-4C

Technical specifications		
Power supply <sup>1)</sup>	Rated voltage	24 VDC
	Voltage range (incl. tolerance)	19.2 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	24 VDC Without SFP	450 mA
	With SFP <sup>2)</sup>	550 mA
Effective power loss	Without SFP	10.8 W
	With SFP <sup>2)</sup>	13.2 W
Overvoltage category		CAT II
Fusing		3.15 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: • [-] Standard version • LD Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C During operation in vertical installation position: -40 °C to +55 °C
	When operating with pluggable transceivers of the types: • LH • LH+ • ELH • SFP992-1+ Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C During operation in vertical installation position: -40 °C to +50 °C
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
	Relative humidity	During operation at 25 °C ≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	

Technical specifications		
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Degree of protection	IP20	
Dimensions (W x H x D)	140 x 147 x 125 mm	
Weight	1200 g	
Installation options	<ul style="list-style-type: none"><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> xx years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

<sup>3)</sup> Depending on which pluggable transceiver you use, the maximum ambient temperature can change, see section "Accessories", "SFP transceiver (Page 32)".

## 9.14 Technical specifications of SCALANCE XC216-4C G

The following technical specifications apply to SCALANCE XC216-4C G.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors		Quantity	12
		Connector	RJ-45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 / 1000 Mbps
Combo ports	Quantity	4	
	Electrical connectors	Quantity	4
		Connector	RJ45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 / 1000 Mbps
	Slots for pluggable transceivers	Quantity	4
		Connector	SFP transceivers (LC port)
		Transmission speed	1000 Mbps
Diagnostics interface			
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			

9.14 Technical specifications of SCALANCE XC216-4C G

Technical specifications			
Power supply <sup>1)</sup>	Rated voltage		24 VDC
	Voltage range (incl. tolerance)		19.2 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design		Terminal block, 4 terminals
	Properties		Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	24 VDC	Without SFP	450 mA
		With SFP <sup>2)</sup>	550 mA
Effective power loss		Without SFP	10.8 W
		With SFP <sup>2)</sup>	13.2 W
Overvoltage category			CAT II
Fusing			3.15 A / 125 V
Signaling contact <sup>1)</sup>	Quantity		1
	Design		Terminal block, 2 terminals
	Permitted voltage range		24 VDC
	Load capability		max. 100 mA
Permitted ambient conditions			
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m		During operation in horizontal installation position: -40 °C to +70 °C
			During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: • [-] Standard version • LD Up to 2000 m		During operation in horizontal installation position: -40 °C to +60 °C
			During operation in vertical installation position: -40 °C to +55 °C
	When operating with pluggable transceivers of the types: • LH • LH+ • ELH • SFP992-1+ Up to 2000 m		During operation in horizontal installation position: -40 °C to +60 °C
			During operation in vertical installation position: -40 °C to +50 °C
	During storage		-40 °C to +85 °C
	During transportation		-40 °C to +85 °C
Relative humidity	During operation at 25 °C		≤ 95% without condensation
Housing, dimensions and weight			
Design	compact		

## 9.15 Technical specifications of SCALANCE XC216-4C G EEC

Technical specifications		
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Degree of protection	IP20	
Dimensions (W x H x D)	140 x 147 x 125 mm	
Weight	1200 g	
Installation options	<ul style="list-style-type: none"><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> xx years	

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

<sup>3)</sup> Depending on which pluggable transceiver you use, the maximum ambient temperature can change, see section "Accessories", "SFP transceiver (Page 32)".

## 9.15 Technical specifications of SCALANCE XC216-4C G EEC

The following technical specifications apply to SCALANCE XC216-4C G EEC.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors	Quantity	12	
	Connector	RJ-45 jack	
	Properties	Half/full duplex, MDI-X pinning	
	Transmission speed	10 / 100 / 1000 Mbps	
Combo ports	Quantity	4	
	Electrical connectors	Quantity	4
		Connector	RJ45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 / 1000 Mbps
	Slots for pluggable transceivers	Quantity	4
		Connector	SFP transceivers (LC port)
		Transmission speed	1000 Mbps
	Diagnostics interface		
Serial interface	Quantity	1	
	Connector	RJ-11 jack	
Electrical data			

Technical specifications			
Power supply <sup>1)</sup>	Rated voltage		24 VDC
	Voltage range (incl. tolerance)		19.2 to 31.2 VDC Safe Extra Low Voltage (SELV)
	Design		Terminal block, 4 terminals
	Properties		Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	24 VDC	Without SFP	450 mA
		With SFP <sup>2)</sup>	550 mA
Effective power loss		Without SFP	10.8 W
		With SFP <sup>2)</sup>	13.2 W
Overvoltage category			CAT II
Fusing			3.15 A / 125 V
Signaling contact <sup>1)</sup>	Quantity		1
	Design		Terminal block, 2 terminals
	Permitted voltage range		24 VDC
	Load capability		max. 100 mA
Permitted ambient conditions			
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m		During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• [-] Standard version</li><li>• LD</li></ul> Up to 2000 m		During operation in horizontal installation position: -40 °C to +60 °C During operation in vertical installation position: -40 °C to +55 °C
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• LH</li><li>• LH+</li><li>• ELH</li><li>• SFP992-1+</li></ul> Up to 2000 m		During operation in horizontal installation position: -40 °C to +60 °C During operation in vertical installation position: -40 °C to +50 °C
	With operation between 2000 m and 3000 m		The maximum ambient temperature is reduced by 5 °C <sup>4)</sup>
	With operation between 3000 m and 4000 m		The maximum ambient temperature is reduced by 10 °C <sup>4)</sup>
	During storage		-40 °C to +85 °C
	During transportation		-40 °C to +85 °C
	Relative humidity	During operation at 25 °C	

Technical specifications		
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	140 x 147 x 125 mm	
Weight	1200 g	
Installation options	<ul style="list-style-type: none"><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>	
Mean time between failure (MTBF)		
MTBF (EN/IEC 61709; 40 °C)	> xx years	

#### 1) Wiring rules

Observe the wiring rules (Page 65).

#### 2) Pluggable transceiver

Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

#### 3) Ambient temperature with SFP

The maximum ambient temperature during operation depends on the operating elevation and the installed pluggable transceivers, see also the section "SFP transceiver (Page 32)" in the "Accessories" section.

#### 4) Derating

The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.16 Technical specifications of the SCALANCE XC224

The following technical specifications apply to the SCALANCE XC224.

<b>Technical specifications</b>		
<b>Connection to Industrial Ethernet</b>		
Electrical connectors	Quantity	24
	Connector	RJ-45 jack
	Properties	Half/full duplex, MDI-X pinning
	Transmission speed	10 / 100 Mbps
<b>Diagnostics interface</b>		
Serial interface	Quantity	1
	Connector	RJ-11 jack
<b>Electrical data</b>		
Power supply <sup>1)</sup>	Rated voltage	12 to 24 V DC
	Voltage range (incl. tolerance)	9.6 to 31.2 V DC Safe Extra Low Voltage (SELV)
	Design	Terminal block, 4 terminals
	Property	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.
Current consumption	12 VDC	750 mA
	24 VDC	375 mA
Effective power loss		9 W
Overvoltage category		CAT II
Fusing		2.5 A / 125 V
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
<b>Permitted ambient conditions</b>		
Ambient temperature	When operating up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C
		During operation in vertical installation position: -40 °C to +70 °C
		During storage
		-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
Relative humidity	During operation at 25 °C	≤ 95% without condensation
<b>Housing, dimensions and weight</b>		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)

Technical specifications	
Degree of protection	IP20
Dimensions (W x H x D)	120 x 147 x 125 mm
Weight	880 g
Installation options	<ul style="list-style-type: none"> <li>• Wall mounting</li> <li>• Installation on a DIN rail</li> <li>• Mounting on an S7-300 standard rail</li> <li>• Mounting on an S7-1500 standard rail</li> </ul>
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> 41 years

<sup>1)</sup> Note the wiring rules (Page 65).

## 9.17 Technical specifications of SCALANCE XC224-4C G

The following technical specifications apply to SCALANCE XC224-4C G.

Technical specifications			
Connection to Industrial Ethernet			
Electrical connectors		Quantity	20
		Connector	RJ-45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 / 1000 Mbps
Combo ports	Quantity		4
	Electrical connectors	Quantity	4
		Connector	RJ45 jack
		Properties	Half/full duplex, MDI-X pinning
		Transmission speed	10 / 100 / 1000 Mbps
	Slots for pluggable transceivers	Quantity	4
		Connector	SFP transceivers (LC port)
		Transmission speed	1000 Mbps
Diagnostics interface			
Serial interface		Quantity	1
		Connector	RJ-11 jack
Electrical data			
Power supply <sup>1)</sup>		Rated voltage	24 VDC
		Voltage range (incl. tolerance)	19.2 to 31.2 VDC Safe Extra Low Voltage (SELV)
		Design	Terminal block, 4 terminals
		Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.

9.17 Technical specifications of SCALANCE XC224-4C G

Technical specifications			
Current consumption	24 VDC	Without SFP	600 mA
		With SFP <sup>2)</sup>	700 mA
Effective power loss		Without SFP	14.4 W
		With SFP <sup>2)</sup>	16.8 W
Overvoltage category	CAT II		
Fusing	3.15 A / 125 V		
Signaling contact <sup>1)</sup>	Quantity	1	
	Design	Terminal block, 2 terminals	
	Permitted voltage range	24 VDC	
	Load capability	max. 100 mA	
Permitted ambient conditions			
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C	
		During operation in vertical installation position: -40 °C to +60 °C	
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• [-] Standard version</li><li>• LD</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C	
		During operation in vertical installation position: -40 °C to +55 °C	
	When operating with pluggable transceivers of the types: <ul style="list-style-type: none"><li>• LH</li><li>• LH+</li><li>• ELH</li><li>• SFP992-1+</li></ul> Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C	
		During operation in vertical installation position: -40 °C to +50 °C	
	During storage	-40 °C to +85 °C	
	During transportation	-40 °C to +85 °C	
Relative humidity	During operation at 25 °C	≤ 95% without condensation	
Housing, dimensions and weight			
Design	compact		
Housing material	Basic housing	Die cast aluminum, powder coated	
	Front cover	Polycarbonate (PC-GF10)	
Degree of protection	IP20		
Dimensions (W x H x D)	140 x 147 x 125 mm		
Weight	1300 g		
Installation options	<ul style="list-style-type: none"><li>• Installation on a DIN rail</li><li>• Mounting on an S7-300 standard rail</li><li>• Mounting on an S7-1500 standard rail</li></ul>		

Technical specifications	
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> xx years

<sup>1)</sup> Note the wiring rules (Page 65).

<sup>2)</sup> Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

<sup>3)</sup> Depending on which pluggable transceiver you use, the maximum ambient temperature can change, see section "Accessories", "SFP transceiver (Page 32)".

## 9.18 Technical specifications of SCALANCE XC224-4C G EEC

The following technical specifications apply to SCALANCE XC224-4C G EEC.

Technical specifications				
Connection to Industrial Ethernet				
Electrical connectors		Quantity	20	
		Connector	RJ-45 jack	
		Properties	Half/full duplex, MDI-X pinning	
		Transmission speed	10 / 100 / 1000 Mbps	
Combo ports	Quantity	4		
	Electrical connectors	Quantity	4	
		Connector	RJ45 jack	
		Properties	Half/full duplex, MDI-X pinning	
		Transmission speed	10 / 100 / 1000 Mbps	
	Slots for pluggable transceivers	Quantity	4	
		Connector	SFP transceivers (LC port)	
		Transmission speed	1000 Mbps	
Diagnostics interface				
Serial interface		Quantity	1	
		Connector	RJ-11 jack	
Electrical data				
Power supply <sup>1)</sup>		Rated voltage	24 VDC	
		Voltage range (incl. tolerance)	19.2 to 31.2 VDC Safe Extra Low Voltage (SELV)	
		Design	Terminal block, 4 terminals	
		Properties	Implemented redundantly; The connected power supply must meet the requirements of NEC Class 2.	
Current consumption	24 VDC	Without SFP	600 mA	
		With SFP <sup>2)</sup>	700 mA	

Technical specifications		
Effective power loss	Without SFP	14.4 W
	With SFP <sup>2)</sup>	16.8 W
Overvoltage category	CAT II	
Fusing	3.15 A / 125 V	
Signaling contact <sup>1)</sup>	Quantity	1
	Design	Terminal block, 2 terminals
	Permitted voltage range	24 VDC
	Load capability	max. 100 mA
Permitted ambient conditions		
Ambient temperature <sup>3)</sup>	During LAN operation with RJ45 connector up to 2000 m	During operation in horizontal installation position: -40 °C to +70 °C During operation in vertical installation position: -40 °C to +60 °C
	When operating with pluggable transceivers of the types: • [-] Standard version • LD Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C During operation in vertical installation position: -40 °C to +55 °C
	When operating with pluggable transceivers of the types: • LH • LH+ • ELH • SFP992-1+ Up to 2000 m	During operation in horizontal installation position: -40 °C to +60 °C During operation in vertical installation position: -40 °C to +50 °C
	With operation between 2000 m and 3000 m	The maximum ambient temperature is reduced by 5 °C <sup>4)</sup>
	With operation between 3000 m and 4000 m	The maximum ambient temperature is reduced by 10 °C <sup>4)</sup>
	During storage	-40 °C to +85 °C
	During transportation	-40 °C to +85 °C
	Relative humidity	During operation at 25 °C ≤ 95% without condensation
Housing, dimensions and weight		
Design	compact	
Housing material	Basic housing	Die cast aluminum, powder coated
	Front cover	Polycarbonate (PC-GF10)
Properties	Coated printed circuit board (conformal coating)	
Degree of protection	IP20	
Dimensions (W x H x D)	140 x 147 x 125 mm	
Weight	1300 g	

Technical specifications	
Installation options	<ul style="list-style-type: none"> <li>• Installation on a DIN rail</li> <li>• Mounting on an S7-300 standard rail</li> <li>• Mounting on an S7-1500 standard rail</li> </ul>
Mean time between failure (MTBF)	
MTBF (EN/IEC 61709; 40 °C)	> xx years

#### 1) Wiring rules

Observe the wiring rules (Page 65).

#### 2) Pluggable transceiver

Detected with the SFP992-1ELH. You will find the precise values in the operating instructions of the pluggable transceivers, see the section "Introduction", Additional documentation (Page 7).

#### 3) Ambient temperature with SFP

The maximum ambient temperature during operation depends on the operating elevation and the installed pluggable transceivers, see also the section "SFP transceiver (Page 32)" in the "Accessories" section.

#### 4) Derating

The derating values depend on the maximum ambient temperatures during operation up to 2000 m.

## 9.19 Mechanical stability (in operation)

Device	IEC 60068-2-27 shock	IEC 60068-2-6 vibration
	15 g, 11 ms duration 6 shocks per axis	10 - 58 Hz: 0.075 mm 85 - 150 Hz: 1 g 1 octave/min, 20 sweeps
SCALANCE XC206-2 (ST/BFOC)	•	•
SCALANCE XC206-2 (SC)	•	•
SCALANCE XC206-2SFP	•	•
SCALANCE XC206-2SFP G	•	•
SCALANCE XC206-2SFP EEC	•	•
SCALANCE XC206-2SFP G EEC	•	•
SCALANCE XC208	•	•
SCALANCE XC208G	•	•
SCALANCE XC208EEC	•	•
SCALANCE XC208G EEC	•	•
SCALANCE XC216	•	•
SCALANCE XC216EEC	•	•
SCALANCE XC216-4C	•	•
SCALANCE XC216-4C G	•	•

## 9.21 Cable lengths

Device	IEC 60068-2-27 shock	IEC 60068-2-6 vibration
	15 g, 11 ms duration 6 shocks per axis	10 - 58 Hz: 0.075 mm 85 - 150 Hz: 1 g 1 octave/min, 20 sweeps
SCALANCE XC216-4C G EEC	•	•
SCALANCE XC224	•	•
SCALANCE XC224-4C G	•	•
SCALANCE XC224-4C G EEC	•	•

## 9.20 RF radiation according to NAMUR NE21

SCALANCE XC-200 fulfills the following requirement regarding RF radiation.

RF radiation according to IEC 61000-4-3/NAMUR NE21	
80 MHz - 2.0 GHz	2.0 GHz - 2.7 GHz
10 V/m	3 V/m
80% AM (1kHz)	

## 9.21 Cable lengths

The cable lengths listed below apply to the SCALANCE XC-200.

Cable	Permitted cable length
IE TP torsion cable	0 to 45 m
with IE FC Outlet RJ-45 + 10 m TP cord	+ 10 m TP cord
IE TP torsion cable	0 to 55 m
with IE FC RJ-45 Plug 180	
IE FC TP Marine / Trailing / Flexible cable	0 to 75 m
with IE FC Outlet RJ-45 + 10 m TP cord	+ 10 m TP cord
IE FC TP Marine / Trailing / Flexible cable	0 to 85 m
with IE FC RJ-45 Plug 180	
IE FC TP standard cable	0 to 90 m
with IE FC Outlet RJ-45 + 10 m TP cord	+ 10 m TP cord
IE FC TP standard cable	0 to 100 m
with IE FC RJ-45 Plug 180	

## 9.22 Switching properties

The switching properties listed below apply to the SCALANCE XC-200. The SCALANCE XC-200 gigabit variants (Page 7) differ from the other SCALANCE XC-200 devices in some switching properties.

Switching properties	SCALANCE XC-200	SCALANCE XC-200G
Aging time	Can be configured (default value: 30 seconds)	
Maximum frame size	1632	2048
Max. number of learnable addresses	8192	16000
Response to LLDP frames		Blocking
Response to spanning tree BPDU frames		Forwarding
CoS acc. to IEEE 802.1Q		Yes
QoS priority queues	4	8
Switching technique		Store and forward
Latency		10 microseconds

Full wire speed switching	
Frame length (bytes)	Number of frames per second (at 100 Mbps)
64	148810
128	84459
256	45290
512	23496
1024	11973
1280	9615
1518	8127

### Note

The number of SCALANCE XC-200 modules connected in a line influences the entire frame delay. When a frame passes through the IE switch, this is delayed by the store-and-forward function of the SCALANCE XC-200 by 10-130 microseconds (at 100 Mbps).



## Dimension drawings

### 10.1 Dimension drawings SCALANCE XC-200

---

**Note**

Dimensions are specified in mm.

---

**Front view**

This front view applies to the following devices:

- SCALANCE XC206-2 (ST/BFOC)
- SCALANCE XC206-2 (SC)
- SCALANCE XC206-2SFP
- SCALANCE XC206-2SFP G
- SCALANCE XC206-2SFP EEC
- SCALANCE XC206-2SFP G EEC
- SCALANCE XC208
- SCALANCE XC208G
- SCALANCE XC208EEC
- SCALANCE XC208G EEC


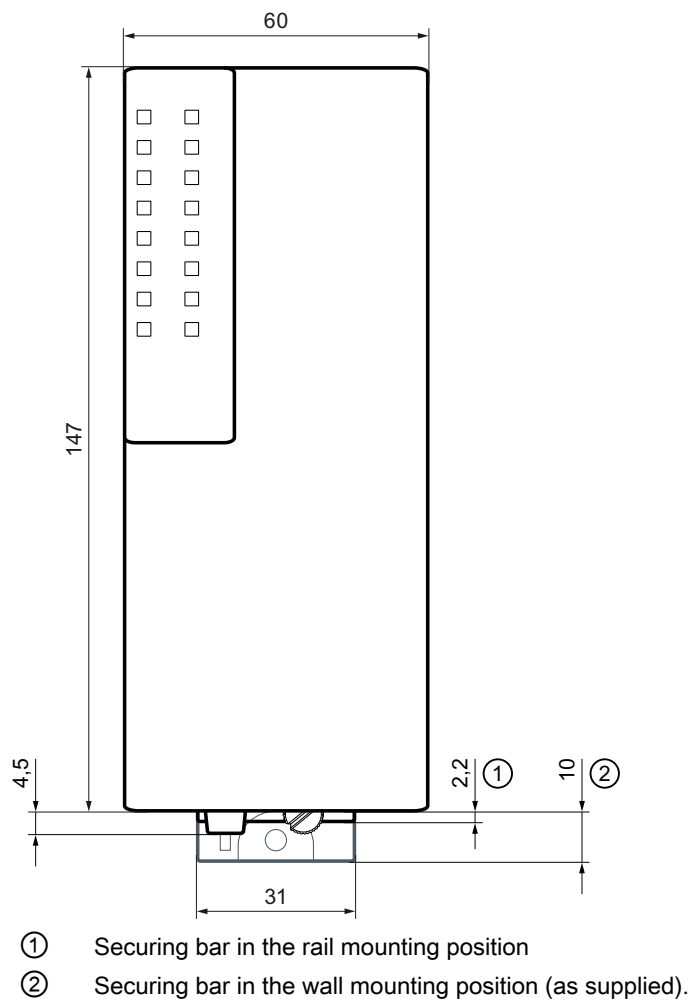


Figure 10-1 Width and height

## Front view

This front view applies to the following devices:

- SCALANCE XC216
- SCALANCE XC216EEC
- SCALANCE XC224

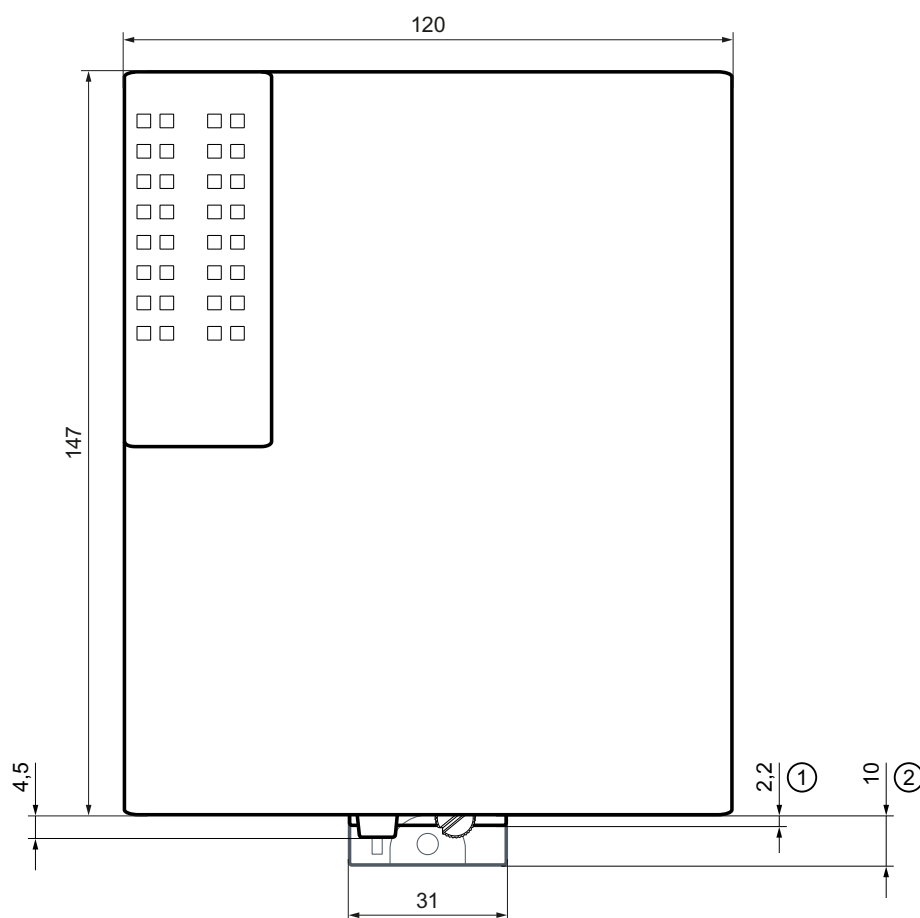

- ① Securing bar in the rail mounting position
- ② Securing bar in the wall mounting position (as supplied).

Figure 10-2 Width and height

## Front view

This front view applies to the following devices:

- SCALANCE XC216-4C
- SCALANCE XC216-4C G
- SCALANCE XC216-4C G EEC
- SCALANCE XC224-4C G
- SCALANCE XC224-4C G EEC

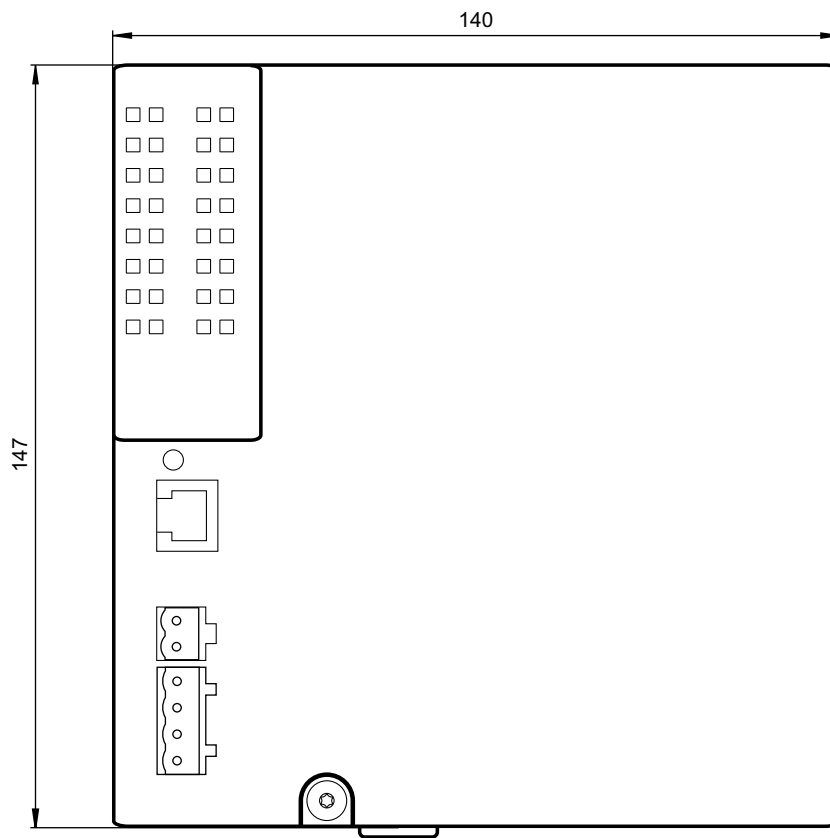


Figure 10-3 Width and height

**Side view of the SCALANCE XC-200**

This side view applies to all SCALANCE XC-200. Devices without fastening plate have the same dimensions in relation to depth.

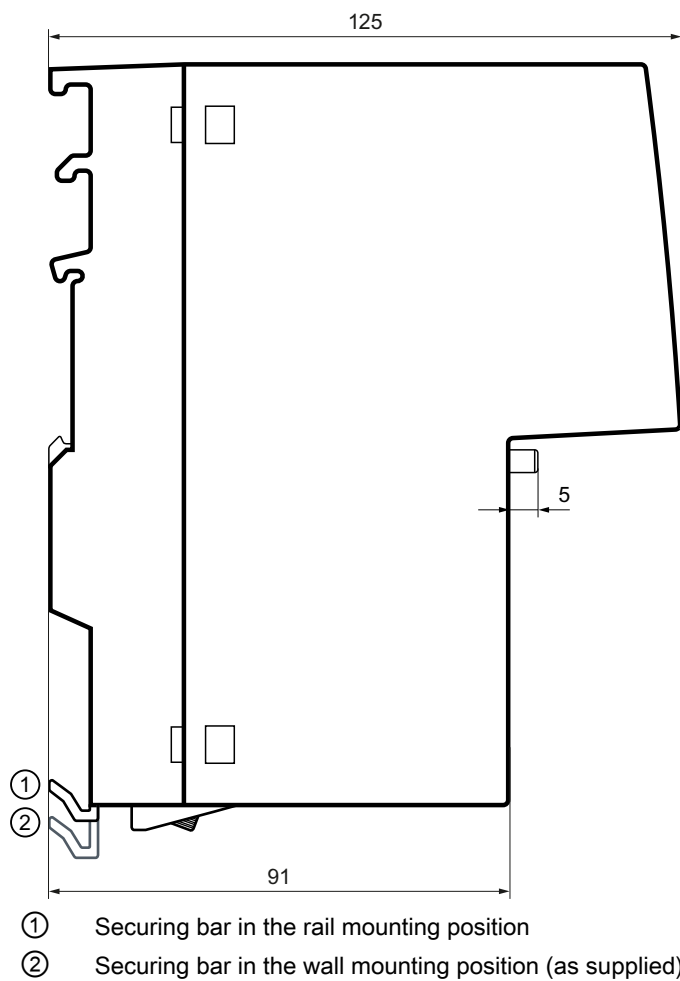


Figure 10-4 Depth

### Drilling template for wall mounting

The drilling pattern applies to all devices with a fastening plate.

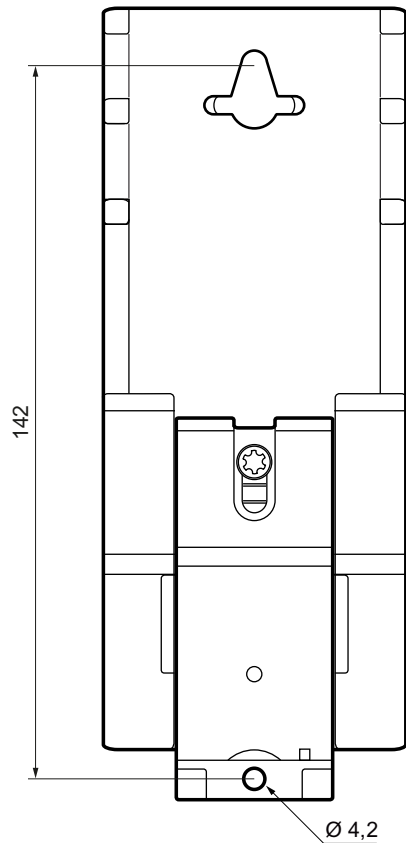


Figure 10-5 Drilling template with securing bar in the wall mounting position (as supplied)

# Certifications and approvals

The SIMATIC NET products described in these Operating Instructions have the approvals listed below.

---

## Note

### Issued approvals on the type plate of the device

The specified approvals apply only when the corresponding mark is printed on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate.

---

## Current approvals on the Internet

You will find the current approvals for the product on the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15273/cert>).

## Notes for the manufacturers of machines

The devices are not machines in the sense of the EC Machinery Directive. There is therefore no declaration of conformity relating to the EC Machinery Directive 2006/42/EC for these devices.

If the devices are part of the equipment of a machine, they must be included into the EU declaration of conformity procedure by the manufacturer of the machine.

## EC declaration of conformity



The SIMATIC NET products described in these operating instructions meet the requirements and safety objectives of the following EC directives and comply with the harmonized European standards (EN) which are published in the official documentation of the European Union and here.

- **2014/34/EU (ATEX explosion protection directive)**  
Directive of the European Parliament and the Council of 26 February 2014 on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres, official journal of the EU L96, 29/03/2014, pages. 309-356
- **2014/30/EU (EMC)**  
EMC directive of the European Parliament and of the Council of February 26, 2014 on the approximation of the laws of the member states relating to electromagnetic compatibility; official journal of the EU L96, 29/03/2014, pages. 79-106
- **2011/65/EU (RoHS)**  
Directive of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment, official journal of the EC L174, 01/07/2011, pages 88-110

You will find the EC declaration of conformity for these products on the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/15273/cert>).

The EC Declaration of Conformity is available for all responsible authorities at:

Siemens Aktiengesellschaft

Division Process Industries and Drives

Process Automation

DE-76181 Karlsruhe

Germany

## ATEX (explosion protection directive)

### **WARNING**

#### **Risk of explosion in hazardous areas**

When using SIMATIC NET products in hazardous area zone 2, make absolutely sure that the associated conditions in the following document are adhered to:

"SIMATIC NET Product Information Use of subassemblies/modules in a Zone 2 Hazardous Area".

You will find this document here:

- On the data medium that ships with some products:
  - Product CD / product DVD
  - SIMATIC NET Manual Collection
- On the Internet pages of Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/view/78381013>)

The SIMATIC NET products described in these operating instructions meet the requirements of the EU directive 2014/34/EU "Equipment and Protective Devices for Use in Potentially Explosive Atmospheres".

---

### **Note**

#### **Type of protection of the device**

The devices are approved for various types of protection. You can find the type of protection of your device and the ATEX certificate number on the nameplate.

---

### Permitted types of protection

The following types of protection are possible:

- nA  
ATEX classification: II 3G Ex nA IIC T4 Gc  
Certificate no.: KEMA 07ATEX0145 X  
The products meet the requirements of the following standards:
  - EN 60079-15 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n")
  - EN 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)
- nA [op is]  
ATEX classification: II 3 (2) G Ex nA [op is Gb] IIC T4 Gc  
Certificate no.: DEKRA 11ATEX0060 X  
The products meet the requirements of the following standards:
  - EN 60079-28 (Explosive atmospheres - Part 28: Protection of equipment and transmission systems using with optical radiation)
  - EN 60079-15 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n")
  - EN 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)
- ec  
ATEX classification: II 3 G Ex ec IIC T4 Gc  
Certificate no.: DEKRA 18ATEX0025 X  
The products meet the requirements of the following standards:
  - EN 60079-7 (Explosive atmospheres - Part 7: Equipment protection through increased safety "e")
  - EN 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)

You will find the current versions of the standards in the currently valid ATEX certificates.

## IECEx

The SIMATIC NET products described in these operating instructions meet the requirements of explosion protection according to IECEx.

---

### Note

#### Type of protection of the device

The devices are approved for various types of protection. You can find the type of protection of your device and the IECEx certificate number on the nameplate.

---

### Permitted types of protection

The following types of protection are possible:

- nA  
IECEX classification: Ex nA IIC T4 Gc  
Certificate no.: DEK 14.0025X  
The products meet the requirements of the following standards:
  - IEC 60079-15 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n")
  - IEC 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)
- nA [op is]  
IECEX classification: Ex nA [op is Gb] IIC T4 Gc  
Certificate no.: DEK 14.0026X  
The products meet the requirements of the following standards:
  - IEC 60079-28 (Explosive atmospheres - Part 28: Protection of equipment and transmission systems using with optical radiation)
  - IEC 60079-15 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n")
  - IEC 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)
- ec  
IECEX classification: Ex ec IIC T4 Gc  
Certificate no.: DEK 18.0017X  
The products meet the requirements of the following standards:
  - IEC 60079-7 (Explosive atmospheres - Part 7: Equipment protection through increased safety "e")
  - IEC 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)

You will find the current versions of the standards in the currently valid IECEX certificates.

### Note for devices with CLASS 1 LASER

Important note on products certified according to Type Examination Certificate KEMA 07ATEX0145 X as of Issue 95 / DEKRA 18ATEX0025X and IECEX Certificate of Conformity DEK 14.0025X as of Issue 43 / DEK 18.0017X and containing Class 1 optical radiation sources.

---

#### Note

#### CLASS 1 LASER

The device contains optical radiation sources which comply with the limits of Class 1 according to IEC 60825-1. Fiber-optic cables connected to these optical radiation sources may therefore be routed either to or through hazardous areas requiring Category 2G, 3G, 2D or 3D equipment.

---

### EMC directive (electromagnetic compatibility)

The SIMATIC NET products described in these operating instructions meet the requirements of EU directive 2014/30/EU "Electromagnetic Compatibility" (EMC Directive).

Applied standards:

- EN 61000-6-2 Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments
- EN 61000-6-4 Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

You will find the current versions of the standards in the currently valid EC declaration of conformity.

### **EMC directive (railway application)**

The device versions EEC also meet the requirements of the EU Directive 2014/30/EU "Electromagnetic Compatibility" (EMC Directive).

Applied standards:

- EN 50121-3-2 Railway applications - Electromagnetic compatibility - part 3-2: Rolling stock - Devices
- EN 50121-4 Railway applications - Electromagnetic compatibility - part 4: Interference emissions and immunity of signal telecommunications equipment

You will find the current versions of the standards in the currently valid EC declaration of conformity.

### **RoHS**

The SIMATIC NET products described in these operating instructions meet the requirements of the EC directive 2011/65/EC for the restriction of the use of certain hazardous substances in electrical and electronic equipment:

Applied standard:

- EN 50581

### **FM**

The product meets the requirements of the standards:

- Factory Mutual Approval Standard Class Number 3611
- FM Hazardous (Classified) Location Electrical Equipment:  
Non Incendive / Class I / Division 2 / Groups A,B,C,D / T4 and  
Non Incendive / Class I / Zone 2 / Group IIC / T4

### **cULus approval for industrial control equipment**

cULus Listed IND. CONT. EQ.

Underwriters Laboratories Inc. complying with

- UL 61010-2-201
- CAN/CSA-IEC 61010-2-201

Report no. E85972

### cULus Approval for Information Technology Equipment

cULus Listed I. T. E.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- CSA C22.2 No. 60950-1-03

Report no. E115352

### cULus Approval Hazardous Location

cULus Listed I. T. E. FOR HAZ. LOC.

Underwriters Laboratories Inc. complying with

- UL 60950-1 (Information Technology Equipment)
- ANSI/ISA 12.12.01-2007
- CSA C22.2 No. 213-M1987

Approved for use in

Cl. 1, Div. 2, GP A, B, C, D T4

Cl. 1, Zone 2, GP IIC T4

Report no. E240480

### Note for Australia - RCM

The product meets the requirements of the RCM standard.

Applied standards:

- AS/NZS CISPR11 (Industrial, scientific and medical equipment - Radio-frequency disturbance characteristics - Limits and methods of measurement).
- EN 61000-6-4 Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

You will find the current versions of the standards in the currently valid RCM SDoCs (Self-Declaration of Conformity).

### MSIP 요구사항 - For Korea only

#### A급 기기(업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

### Marking for the customs union



EAC (Eurasian Conformity)

Eurasian Economic Union of Russia, Belarus, Armenia, Kazakhstan and Kyrgyzstan

Declaration of conformity according to the technical regulations of the customs union (TR ZU)

## FDA and IEC marking

The following devices meet the FDA and IEC requirements listed below:

Device	CLASS 1 LASER PRODUCT
SCALANCE XC206-2 (ST/BFOC)	•
SCALANCE XC206-2 (SC)	•
SCALANCE XC206-2SFP	(*)
SCALANCE XC206-2SFP G	(*)
SCALANCE XC206-2SFP EEC	(*)
SCALANCE XC206-2SFP G EEC	(*)
SCALANCE XC208	-
SCALANCE XC208G	-
SCALANCE XC208EEC	-
SCALANCE XC208G EEC	-
SCALANCE XC216	-
SCALANCE XC216EEC	-
SCALANCE XC216-4C	(*)
SCALANCE XC216-4C G	(*)
SCALANCE XC216-4C G EEC	(*)
SCALANCE XC224	-
SCALANCE XC224-4C G	(*)
SCALANCE XC224-4C G EEC	(*)

\* In modular devices, you can find the marking on the plug-in transceiver used or in the relevant operating instructions.



Figure 11-1 FDA and IEC approvals

<p><b>⚠ CAUTION</b></p> <p>Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.</p>
--

## Installation guidelines

The devices meet the requirements if you adhere to the installation and safety instructions contained in this documentation and in the following documentation when installing and operating the devices.

- "Industrial Ethernet / PROFINET Industrial Ethernet" System Manual (<https://support.industry.siemens.com/cs/ww/en/view/27069465>)
- "Industrial Ethernet / PROFINET - Passive Network Components" System Manual (<https://support.industry.siemens.com/cs/ww/en/view/84922825>)
- "EMC Installation Guidelines" configuration manual (<https://support.industry.siemens.com/cs/ww/en/view/60612658>)



### **WARNING**

#### **Personal injury and property damage can occur**

The installation of expansions that are not approved for SIMATIC NET products or their target systems may violate the requirements and regulations for safety and electromagnetic compatibility.

Only use expansions that are approved for the system.

---

### **Note**

The test was performed with a device and a connected communications partner that also meets the requirements of the standards listed above.

When operating the device with a communications partner that does not comply with these standards, adherence to the corresponding values cannot be guaranteed.

---

# Index

## A

Approvals, 127  
Article numbers, 21  
Autonegotiation, 70

## B

Button, 77

## C

CE mark, 127  
Combo port, 44  
Command Line Interface (CLI), 42, 72, 77  
Components of the product, 24  
Configuration, 36  
Connecting cable, 72  
Connecting up  
    Grounding, 68  
Connection to Industrial Ethernet, 84, 86, 88, 91, 94,  
96, 98, 100, 102, 104, 105, 107, 109, 112, 113, 115  
C-PLUG  
    Configuration, 41

## D

Dimensions, 79, 82, 85, 87, 89, 92, 94, 96, 98, 100,  
102, 104, 106, 108, 111, 112, 114, 116  
Display mode, 35, 38

## E

Electrical data, 79, 81, 84, 86, 88, 91, 94, 96, 98, 100,  
102, 104, 105, 107, 109, 112, 113, 115  
Environmental conditions, 34, 79, 81, 84, 86, 88, 91,  
94, 96, 98, 100, 102, 104, 106, 108, 110, 112, 114,  
116  
ESD directives, 11

## F

Factory defaults, 35, 78  
Factory setting, 78  
Factory settings, 35, 78

Fault mask, 36  
Fault/error status, 38  
Firmware, 38, 77

## G

Glossary, 9  
Grounding, 25, 26, 27, 28, 29, 30, 31, 32, 68  
Grounding screw, 25, 26, 27, 28, 29, 30, 31, 32

## H

Housing, 79, 82, 85, 87, 89, 92, 94, 96, 98, 100, 102,  
104, 106, 108, 111, 112, 114, 116

## I

Installation, 79, 82, 85, 87, 89, 92, 94, 96, 98, 100,  
102, 104, 106, 108, 111, 112, 114, 116  
    Installation on a DIN rail, 52, 53  
    Installation on a standard rail, 54, 55, 56, 58  
    Wall mounting, 58  
Installation on a DIN rail, 52, 53  
Installation on a standard rail, 54, 55, 56, 58

## K

Knurled screw, 25, 26, 27, 28, 29, 31, 52, 54, 56

## L

LED display, 25, 26, 27, 28, 29, 30, 31, 32, 37  
Levering aid, 25, 26, 27, 28, 29, 31, 59

## M

MDI / MDI-X autocrossover, 70  
MTBF, 80, 82, 85, 87, 89, 92, 95, 97, 99, 101, 103,  
105, 107, 109, 111, 113, 115, 117

## P

Permitted ambient conditions, 34, 79, 81, 84, 86, 88,  
91, 94, 96, 98, 100, 102, 104, 106, 108, 110, 112, 114,  
116  
Pin assignment, 70

PLUG, 41  
Pluggable transceiver  
    SFP, 8, 33, 34  
Plug-in transceiver  
    SFP bidirectional, 34  
Power supply, 24, 25, 26, 27, 28, 29, 30, 31, 32, 66

## **R**

Reset device, 35, 78  
Reset to Factory Defaults, 36, 78

## **S**

S7-1500, 56, 58  
S7-300, 54, 55  
Safety notices  
    for installation, 47  
    general, 13  
    Use in hazardous areas, 13, 47, 61  
    when connecting up, 61  
Securing bar, 25, 26, 27, 28, 29, 31, 52, 54, 56, 122, 123, 125  
Securing location, 55, 58  
Securing screw, 55, 58  
SELECT/SET button, 25, 26, 27, 28, 29, 30, 31, 32, 35, 39, 78  
Serial interface, 72  
SFP transceiver, 8, 33, 34  
Signaling contact, 24, 25, 26, 27, 28, 29, 30, 31, 32, 38, 67  
SIMATIC NET glossary, 9  
SIMATIC NET manual, 9  
Spare parts, 24  
Spring-loaded terminal, 24, 66, 67  
Startup phase, 36, 38, 78  
System manual, 9, 134

## **W**

Web Based Management (WBM), 42, 77  
Weight, 79, 82, 85, 87, 89, 92, 94, 96, 98, 100, 102, 104, 106, 108, 111, 112, 114, 116  
Wiring rules, 66, 67